

Superlift 5" to 7" lift system for 1988- 1998 GENERAL MOTORS FULL-SIZE ¾ AND 1 TON 4WD Trucks (8 Lug) INSTALLATION INSTRUCTIONS

INTRODUCTION

Installation requires a professional mechanic. Prior to beginning, inspect the vehicles steering, driveline, and brake systems, paying close attention to the suspension link arms and bushings, anti-sway bars and bushings, tie rod ends, pitman arm, ball joints and wheel bearings. Also check the steering sector-to-frame and all suspension-to-frame attaching points for stress cracks. The overall vehicle must be in excellent working condition; repair or replace all worn parts.

Read instructions several times before starting. Be sure you have all needed parts and know where they install. Read each step completely as you go.

NOTES:

- Rear lift is performed first. The rear lift is **sold separately** and includes separate installation instructions.
- Speedometer reprogramming is necessary; refer to step 46. The device is **sold separately** and includes separate installation instructions.
- A special tool is required to load/unload the torsion bars (step 2). Other special tools are recommended to detach/attach the pitman/idler studs. Refer to the factory service manual.
- Front end realignment is necessary.
- Exhaust modification is necessary, refer to step 49.
- This system utilizes the stock torsion bars, which normally yield the best ride quality. But, if the "final product" ride and handling seem too soft, heavier Gross Vehicle Weight Rating (GVWR) bars can be installed. Generally, heavier torsion bars are only needed to compensate for the extra weight of a winch or snowplow, or when the truck is subjected to extreme off-road use. Also, wider tires and wheels proportionally increase the leverage on the bars, which results in lower ride height and a "spongier" ride. GM offers torsion bars with various rates that are heavier than stock. Your vehicle's existing torsion bar rate can be identified by a 3-letter code stamped into the bars' ends. The code is also on an adhesive tag wrapped around the bars.
- An arrow on diagrams indicates which direction is toward the front of the vehicle.
- A foot-pound torque reading is given in parenthesis () after each appropriate fastener.
- O not fabricate any components to gain additional suspension height.
- Prior to drilling or cutting, check behind the surface being worked on for any wires, lines, or hoses that could be damaged.
- After drilling, file smooth any burrs and sharp edges.
- Prior to operating a torch or saw, protect any heat-sensitive components located in the immediate area by covering them with a water-saturated cloth. Most undercoating are

- flammable but can be extinguished using a water-filled spray bottle. Have a spray bottle and an ABC rated fire extinguisher on hand.
- Paint or undercoat all exposed metal surfaces.
- Prior to attaching components, be sure all mating surfaces are free of grit, grease, undercoating, etc.
- A factory service manual should be on hand for reference.
- Use the check-off box "\(\sigma\)" found at each step to help you keep your place. Two "\(\sigma\)\(\sigma\)" denotes that one check-off box is for the driver side and one is for the passenger side. Unless otherwise noted, always start with the driver side.

PARTS LIST ... The part number is stamped into each part or printed on an adhesive label. Identify each part and place the appropriate mounting hardware with it.

PART NO	DESCRIPTION (Qty if more than one)	NEW ATTACHING HARDWARE (Qty if more than one)
55-01-3270	.bracket, upper control arm's front leg, driver side	9/16" Nyloc nut (2) 1 7/8" sq. washer, 1/8" thick (2) 7/16" x 1" bolt (2) 7/16" Stover nut (4) 5/8" ID, 1/16" thick slim (3) 5/8" USS flat washer
55-02-3270	.bracket, upper control arm's front leg, passenger side	. same as above
55-03-3215	.bracket, lower control arm's front leg, driver side	5/8" x 4 ½" bolt 5/8" Nyloc nut 7/16" x 1 ¼" bolt 7/16" Nyloc nut 7/16" thick washer
55-14-3215	.bracket, lower control arm's rear legs, driver side	same as above
55-05-3215	.bracket, upper/lower control arm's rear legs, driver side	` /

PART NO	DESCRIPTION (Qty if more than one)	NEW ATTACHING HARDWARE (Qty if more than one)
55-06-3215	bracket, upper/lower control arm's rear legs, passenger side	same as above
55-03-3270	crossmember, differential front	(2) 9/16" x 4" bolt (2) 9/16" Nyloc nut
55-14-3270	crossmember, differential rear	
55-11-3215	centerlink	(2) 12mm Stover nut Gd. 8.8 (2) 14mm Stover nut Gd. 8.8 tube thread lock compound
55-01-3213	crossmember, CSS	(2) 9/16" x 1 ½" bolt (2) 9/16" Nyloc nut
55-03-3213	stabilizer link, CSS driver side	(2) 9/16" x 3" bolt 9/16" Nyloc nut (2) 9/16" USS flat washer (4) half bushing (2) sleeve
55-04-3213	stabilizer link, CSS passenger sid	de same as above
55-12-3215	skid plate	(4) 7/16" x 1 ¼" bolt (4) 7/16" Stover nut (8) 7/16", thick washer
55-14-3215	(2) bracket, torsion bar crossmember	(6) 7/16" x 1 ¼" Gd. 8 bolt (6) 7/16" stover nut (12) 7/16" thick washer
55-10-3260	(2) brake line bracket	(2) 3/8" x 1" bolt (2) 3/8" Nyloc Nut (2) 3/8" SAE washer (2) 5/16" x 3/4" bolt (2) 5/16" SAE washer (2) 5/16" Stover nut
	differential vent hose extension	3 1/2" long vent hose w/coupler
PART NO	DESCRIPTION (Qty if more than one)	NEW ATTACHING HARDWARE (Qty if more than one)
85101 <i>or</i> 85113	(2) shock absorber, front	
85156	(2) shock absorber, rear	

NOTE: Your application will include only the #55-10-3211 OR #55-10-3210, not both.

INSTALLATION PROCEDURE

1) PREPARE VEHICLE...

☐ Place vehicle in neutral. Raise front of vehicle with a jack and secure a jack stand beneath each frame rail, behind the lower control arms. Ease the frame down onto the stands, place transmission in low gear or "park", and chock rear tires. Remove front tires.


2) UNLOADING THE TORSION BARS...

WARNING: Be extremely careful when loading or unloading the torsion bars; there is a tremendous amount of energy stored in the bars. Keep your hands and body clear of the adjuster arm assembly and puller tool in case anything slips or breaks.

NOTE: For safe removal/installation of the adjuster arms, a special puller tool is required. Because of the tremendous loads generated, a standard 2-jaw gear puller tool tends to bend down the crossmember "lips" where it attaches and pops out of place. If not found locally, this special puller tool is available from: Kent Moore Tool Group, Roseville, MI

PH: (800) 345-2233 or (313) 774-9500 #J-22517-C

□□ [Diagram 1] On either side, remove the torsion bar adjusting screw. Apply light lubricating grease to the puller threads and the puller shaft-to-adjuster arm contact point. Position puller and load adjuster arm so the adjuster nut can be removed from crossmember. With the bar unloaded, slide it forward into the lower control arm. If the bar seems lodged, use a hammer and punch routed

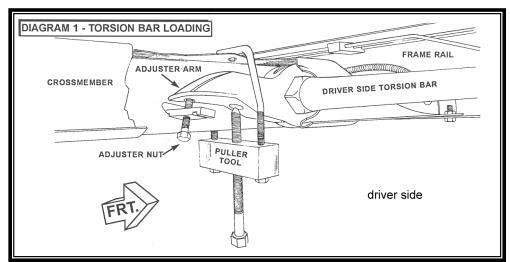

through the hole in the back of the crossmember to drive it forward. When the bar shifts forward, the adjuster arm will fall free.

3) TORSION BAR CROSSMEMBER...

☐ The crossmember connects to the frame with three bolts per side. Remove and discard these bolts.

On vehicles with stock exhaust, it may be necessary to jack-up exhaust to allow clearance for crossmember removal. With the crossmember out of the way, the bars can be dislodged from the lower control arms and removed. Mark the bars (front/rear end and driver/passenger side) and keep them separated because they must be reinstalled on the same side and in the same front/rear direction as they were removed.

NOTE: Steps 4 through 8 are performed one side at a time. Start at the driver side.

4) AXLE SHAFT...

Remove the 6 bolts that attach the CV axle flange to the differential.

5) INNER TIE ROD...

[Diagram 2] The stock centerlink is shown. Using the special puller tool (refer to factory service manual), detach inner tie rod ends from centerlink.

NOTE: Do not hammer on the linkage or use a pickle fork or wedge type tool to dislodge because damage may occur.

6) ANTI-SWAY BAR...

Remove both anti-sway bar drop links, which connect bar body-to-lower control arms. the link nuts, accessed through the bottom of the arms, are somewhat restricted. It may be necessary to detach bar at frame first.

7) CONTROL ARM/HUB ASSEMBLY REMOVAL...

Position a floor jack under the hub assembly. Remove upper and lower control arm bolts and lower assembly to floor.


NOTE: Vehicles equipped with 4 wheel anti-lock brakes have a wiring harness at each front wheel that runs from the frame, along the control arm, and down to the outer axle. Remove mounting bolt, then unplug connector as shown [Diagram 3]. A new mounting hole is drilled in step 30.


☐ Perform Steps 4 through 8 on passenger side.

8) DRIVESHAFT...

Detach front driveshaft at differential and secure it out of the way.

9) SKID PLATE...

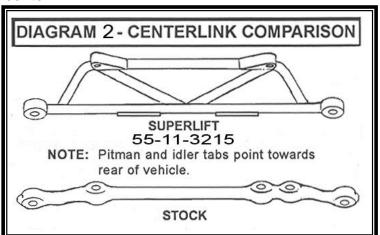

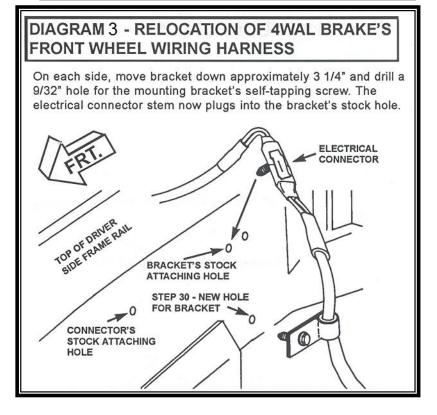


☐ Remove differential skid plate (if so equipped).

10) DIFFERENTIAL WIRING, HOSE...

☐ Unplug differential wiring and vent hose.

11) TRIM FRAME...

☐ [Diagram 4] Place a jack under the differential. Remove the bolts (2 total) that attach the rear

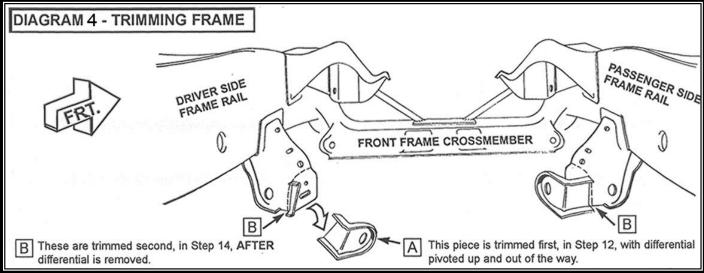

or the differential to the lower control arm/differential mounts on the driver and passenger sides. With the two front upper differential bolts still attached, raise the jack to pivot the differential upward and out of the way.

☐ With a torch, trim off the driver side mounting bracket shown as section "A". This allows the differential to be lowered.

12) REMOVE DIFFERENTIAL ASSEMBLY...


- □ Remove the remaining bolts:
- **1 bolt:** at top of differential on driver side.
- **1 bolt:** upper axle mount-to-frame at passenger side.
- Lower assembly to the floor.

13) TRIM FRAME...

☐ [Diagram 4] On both sides, use a torch to trim Section "B" from the stock lower control arm/differential mount as shown (represented as dotted lines). This allows clearance for the differential in the relocated position.

14) TRAVEL STOPS...

[Diagram 5] On both sides, unbolt

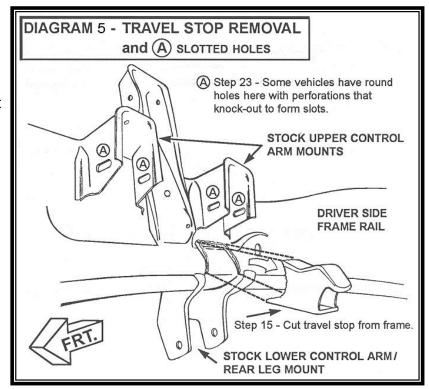

the rubber compression travel stops from their stock position. These stops will be reused.

- ☐ With a torch, carefully trim the steel frame mounted brackets from the frame as shown. Care must be taken to cut these brackets as close to the frame as possible to allow clearance for the Superlift relocation hardware that is installed later.
- ☐ Grind clean all cutting slag from the trimming performed in steps 12, 14, and 15, and lightly coat all bare metal surfaces with a spray-on rust inhibiter.


15) CENTERLINK REMOVAL...

☐ Using the special puller tool (refer to factory service manual), detach center link from pitman and idler arm studs.

NOTE: Do not use a pickle fork or wedge type tool because seal or bushing damage may occur. Also, do not hammer on pitman arm, shaft, or puller because damage to arm/steering gear may result.


16) ANTI-SWAY BAR...

□ [Diagram 6] Detach anti-sway bar body from frame. Reinstall with ends inverted – or switched – so that the bar body steps down instead of up. Tighten sway bar-to-frame bolts (12).

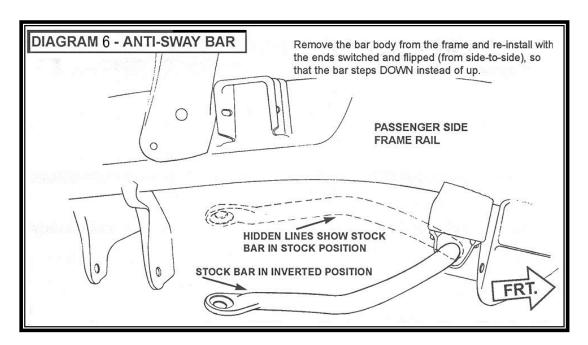

17) IDLER ARM SPACER...

□ [Diagram 7] The spacer fits between the idler arm and its frame mounting point. The arm is accessed by partially removing the passenger side inner fender.

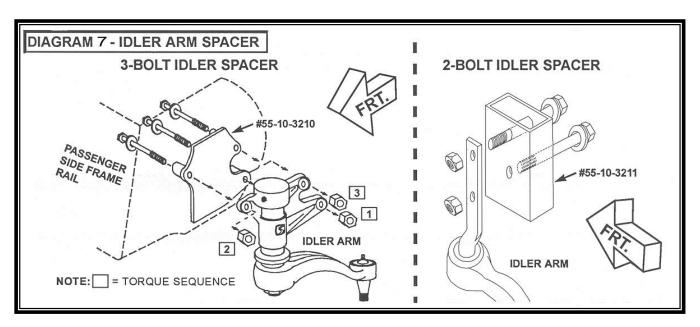

NOTE: On vehicles equipped with an airbag, the airbag sensor is located on the side of the frame near the holes of the idler arm bolts.

WARNING: If struck, the airbag may deploy or malfunction.

For vehicles with the 3-bolt idler arm: #55-10-3210 bracket installs with three 7/16" x 2 3/4" Gd. 8 bolts, thick flat washers, and Stover nuts (LC 57).

NOTE: After hand tightening, nuts must be torqued in this sequence:

- 1) rear bottom
- 2) front
- 3) rear top


OR

For vehicles with the 2-bolt idler arm: #55-01-3211 bracket installs with two 7/16" x 2 3/4" Gd. 8 bolts, thick flat washers, and Stover nuts (LC 57).

18) BRACKETS: LOWER CONTROL ARM'S FRONT LEG, DRIVER SIDE, #55-03-3215 LOWER CONTROL ARM'S FRONT LEG, PASSENGER SIDE, #55-04-3215

[Diagram 8] Each bracket attaches to the stock lower control arm's front leg mount using the stock bolt, pointing rearward.

Each bracket attaches to the frame's front crossmember with two bolts; one inboard and one outboard. At the inboard hole, drill a 15/32" hole into the crossmember and install a 7/16" x $1\frac{1}{10}$ " bolt, flat washer, and Nyloc nut; position the flat washer inside the crossmember (37).

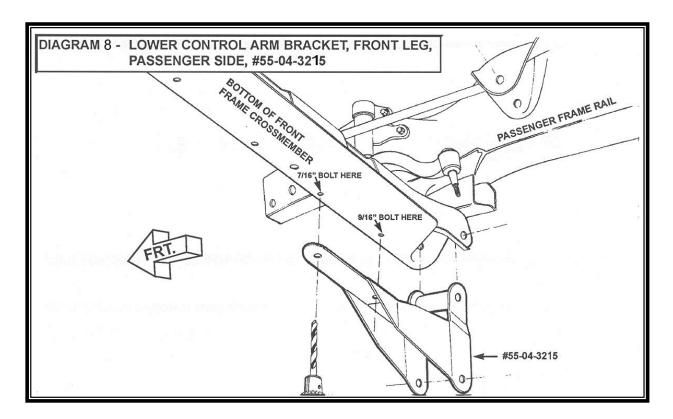

At the outboard holes, install the 9/16" x 1 ½" bolts (pointing downward). These outboard crossmember holes exist on most, but not on all vehicles. If drilling or reaming is necessary, use a 19/32" drill bit. These bolts also capture the Centerlink Stabilizing System (CSS) mount, so do not install nuts yet.


19) CSS CROSSMEMBER MOUNT, #55-01-3213...

☐ [Diagram 9] Mate the "01" bracket onto the 9/16" x 1 ½" bolts, installed in the previous step.

Be sure that the bracket face, where the links will ultimately attach, is angled towards the centerlink, as shown. Install the 9/16" Stover nuts (110). The CSS links are not attached until Step 22.

20) SUPERLIFT CENTERLINK, #55-11-3205...

☐ [Diagram 2] Unless a special seating tool is used (refer to factory service manual), the new pitman/idler arm-to-center link nuts (40) must be initially "snugged up" with an impact wrench. This is necessary

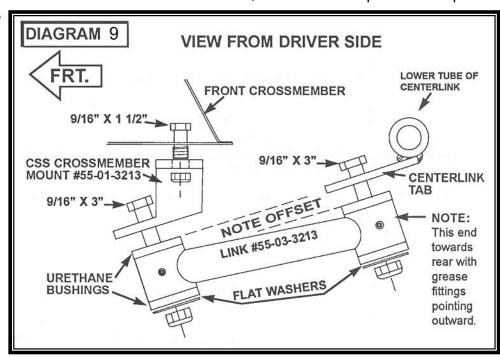

beacause, unless tightened rapidly, the locking nuts cause the tapered studs to rotate in their sockets. Use the furnished 14mm lock nuts; the stock nuts must not be reused.

21) CSS STABILIZER LINK, DRIVER SIDE, #55-03-3213 CSS STABILIZER LINK, PASSENGER SIDE, #55-04-3213...


- [Diagram 9] Coat the sleeves' OD with a light, Lithium based grease. Insert link eye bushings and sleeves into link eyes.
- □ Position the centerlink, installed in step 21, so that the tires (if they were on the vehicle) would be pointing straight ahead.
- □□ Loosely connct the links to the CSS mount. Do not tighten the 9/16" x 3" bolts yet.
- □ Connect the passenger side link-to-centerlink tab first. If the holes are misaligned, turn the steering wheel in either direction until hole alignment is achieved. Then return the centerlink to the centered position. Prior to tightening, be sure that the links are facing straight ahead (parallel to the pitman and idler arms), and that their eye bushings flanges seat flush (no gaps) against all mating surfaces. If gaps exist, slightly bend the tabs or bracket as necessary to close the gaps. Torque all link eye bolt (65).
- □□ Re-torque all CSS hardware. Lubricate eye

22) STOCK UPPER CONTROL ARM HANGERS...

□ [Diagram 5] The hangers have slotted holes that allow the control arms to be moved in or out to achieve front end alignment by adjusting the eccentric cam bolts. On some models, the slot must be opened-up by knocking-out a perforated plug. If the vehicle has been aligned previously, the plugs have probably been removed.

23) BRACKETS: UPPER CONTROL ARM, FRONT LEG, DRIVER SIDE, #55-01-3270 UPPER CONTROL ARM, FRONT LEG, PASS. SIDE, #55-02-3270 DIFFERENTIAL, CROSSMEMBER, FRONT, #55-03-3270...

- [Diagram 10] With brackets laying on the floor, loosely attach the "01" and "02" bracket to the "03" (front differential crossmember) using 7/16" x 1 1/4" bolts and hardware. Be sure to have the attaching flanges of the crossmember to the rear side of the "01" and "02" brackets. do not tighten the 7/16" bolts at this time, the bracket will be shimmed in step 27.
- Position the 3-piece crossmember / bracket assembly up to the frame as shown and align the "01" and "02" brackets into the stock upper control arm mounts. Connect the two using 9/16" x 3 ½" bolts and Nyloc nuts with 1 7/8" square washers positioned on both sides of the 9/16" bolts. The square washers are used

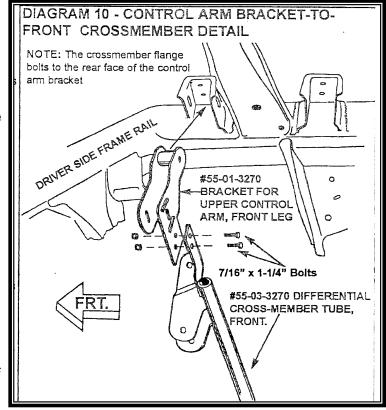


to center the bolts in their slotted holes.

Insert factory bolts throught the crossmember's upper tabs where they mate to the stock differential mounts. These will be tightened later.

24) DIFFERENTIAL-TO-FRONT CROSSMEMBER...

☐ [Diagram 12] Raise the differential into position with a floor jack. Insert two 9/16" x 4" bolts into the differential-to-front crossmember mounts; hand tighten only. This differential mounting hardware is tightened later. Keep the jack "loaded" and in position. The differential's rear crossmember is installed in step 29.

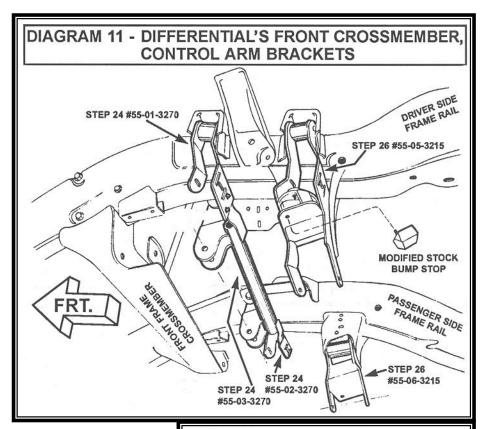

NOTE: Steps 26 through 28 are performed one side at a time. Start at driver's side.

25) BRACKET: UPPER/LOWER CONTROL ARM'S REAR LEGS, DRIVER SIDE, #55-05-3215...

□□ [Diagram 11] Attach the "05" bracket to the stock lower control arm mounting point using the new 5/8" x 5 ½" bolt, pointing rearward. Snug-up, but do not fully torque the bolt yet.

NOTE: Check to see if the top mounting holes align. On some models there will be a clearance problem where the travel stop was cut from the frame. If so, heat and dimple the frame inward to gain needed clearance. The top mounting bolt is shimmed in te next step.

26) SHIMMING BRACKETS...

□□ [Diagram 13] Due to manufacturing tolerances, there will be a certain amount of misalignment between the upper and lower control arm mounts. The

DIFFERENTIAL

STEP 29
#S5-04-3270

DIAGRAM 12 - DIFFERENTIAL CROSSMEMBER

degre of misalignment varies from one vehicle to the next, but generally it is most severe on earlier models (1988-91). The misalignment shows up as gaps between the "05" and "06" brackets and their upper attaching points.

□□ Hardware pack 77-0005 contains 16 thin shims, and hardware pack 77-0022 contains 12 flat washers; a flat washer is two to three times as thick as the shim. Position the shims and washers as needed to close the gaps, then insert the furnished 9/16" x 3 ½" bolt and Nyloc nut, pointing forward. Place a USS flat washer on both the head and nut side of the bolt. Hand tighten only.

□□ The upper control arm, front leg bracket (the "01" bracket) should have gaps as well. Determine the bracket's correct location in relation to the "05" bracket by positioning the "01" bracket 9" to 9 1/8" from the "05 bracket as shown in Diagram 12. Note what is required to close the gaps, then remove the 9/16" bolt and install shims/washers. Only hand tighten the 9/16" bolt. Proper spacing ensures a good, bind-free, upper control arm fit.

27) BUMP-STOP...

□□ [Diagram 14] In order to clear the shock absorber, grind the front/outside corner of the stock rubber compression travel bump-stop to match the radius of its


mounting pad on #55-05-3215. Attach the bump stop as shown.


NOTE: Repeat steps 26 through 28 on the passenger side.

28) DIFFERENTIAL CROSSMEMBER, REAR, #55-14-3270...

□ [Diagram 10] Remove the two 5/8" Nyloc nuts from the bolts that secure the lower ends of the "05" and "06" brackets from the frame. Reposition the jack to under the rear end of the differential. Raise the jack to rotate differential upward as high as it will go. Position the rear crossmember by mating it onto the two 5/8" bolts (one per side) protruding through the stock rear control arm mounts as shown.

☐ Once the crossmember is in place install the two 5/8" Nyloc nuts; hand tigten only. Lower the jack and differential until the rear attachment points align, then install the original mounting bolts (112).

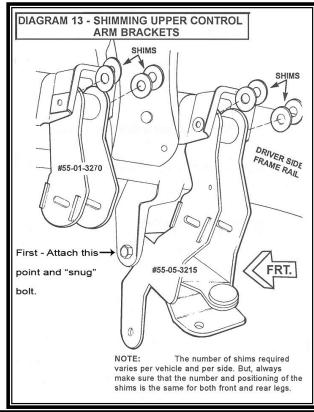

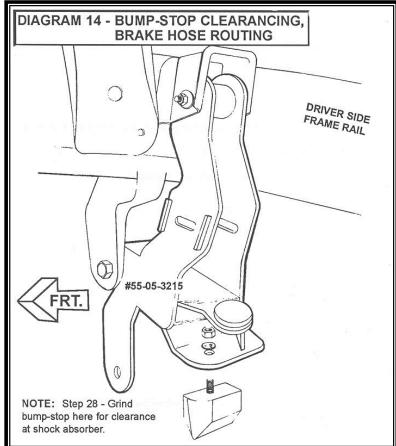

NOTE: Steps 30 through 37 are performed one at a time. Start at the driver side.

29) REHANGING CONTROL ARMS...

With the control arm assembly on a floor jack, raise it into position. Install $5/8$ " x $5 \frac{1}{2}$ " bolt and Nyloc nut at the lower control arm/rear leg attaching point. This bolt points rearward and will also capture the bottom hole of the differential's rear crossmember.
□□ Use a 5/8" x 4 ½" bolt, pointing forward, to connect front leg of lower control arm. □□ Now mate the upper control arm to the Superlift bracket with the factory eccentric cam bolts. In applications with the two-bolt idler, the eccentric cam bolts are supplied. Be sure that the anti-sway bar body is pivoted down so it is below the upper control arm's fron leg.
NOTE: 4-wheel anti-lock brakes [Diagram 3] – The wiring harness, disconnected in step 8, must be relocated lower on the frame.
□□ Drill one new hole as shown, and reconnect harness.
30) AXLE SHAFTS □□ Attach CV axle flange-to-differential (LC 60).

31) TORQUE BOLTS IN THIS SEQUENCE...

- 1) differential's front crossmember-to-frame; 2 bolts (112).
 - 2) differential-to-front crossmember; 2 bolts (82).
 - 3) differential-to-rear crossmember; 2 bolts (82).
- 4) rear crossmember's top bolts-to-"05" and "06" brackets; 2 bolts (112).
 - 5) rear lower control arm legs-to-Superlift brackets; 2 bolts (112); These bolts also capture the two bottom holes on the differential's rear crossmember.
 - 6) front lower control arm legs-to-Superlift brackets; 2 bolts (112)
 - 7) Superlift brackets-to-stock upper control arm mounts; 4 bolts (82)
 - 8) front crossmember-to-"01" and "02" brackets; 4 bolts (57)
 - 9) cam bolts at upper control arm-to-Superlift brackets; 4 bolts (75-90)

NOTE: Before tightening, adjust cams to a neutral, or centered, position.


□□ Check axle flange, centerlink, and differential clearances.

32) SHOCK ABSORBER, FRONT, #85101...

Install shock, torque upper and lower bolts (48). Cycle suspension through full travel cycle and check for adequate clearance between shock, bump stop, and brake hose.

33) BRAKE HOSE BRACKETS...

Remove brake from retaining block located on top

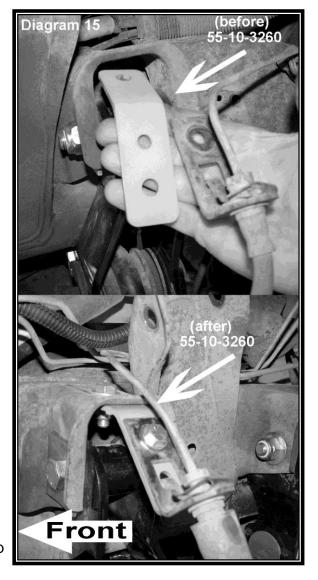

of frame. Remove the factory brake line bracket.

□□ [Diagram 15] Attach the "10-3260 bracket to the factory location using the supplied 3/8" bolt, washer, and Nyloc nut. Align bracket so it is parallel to the center of the upper control arm mount.

Bolt the factory brake line bracket to the "10-3260" using the supplied 5/16" x 3/4" bolt, washers, and Stover nuts. The bolt goes into the middle hole.

□□ Make sure brake lines are not in a bind, kinked, or touching.

34) TIE ROD END, INNER...

Attach inner tie rod end-to-centerlink with furnished 12mm Stover nut (40). Do not reuse the stock nut. Unless a special seating tool is used (refer to factory service manual), the tie rod end-to-centerlink must be initially "snugged up" with an impact wrench.

35) DIFFERENTIAL WIRING, HOSE...

☐ Reconnect differential's electrical plug and vent hose.

36) ANTI-SWAY BAR LINKS...

□□ [Diagram 16] Reinstall stock anti-sway bar drop links. Tighten drop link bolts only until bushings swell slightly.

NOTE: Repeat steps 30 through 37 on passenger side.

37) SKID PLATE, #55-12-3215...

☐ Skid plate attaches, as shown, with stock bolts (57) at the front frame crossmember and new

7/16" hardware (57) at the stock skid plate attaching points. The stock skid plate then bolts to the rear Superlift crossmember with the supplied 7/16" hardware (57). If the vehicle is not equipped with a factory skid plate, order GM Part #15538494 from your local GM dealer.

38) CLEARANCE CHECK...


☐ With vehicle still on the jack stands, and suspension "hanging" at full extension travel, cycle steering lock-to-lock and check all components for proper operation/clearances.

39) BRAKES...

☐ Thoroughly bleed air from the brake system, as per the GM service Manual.

40) TORSION BARS/CROSSMEMBER...

□□ Insert the front end of the torsion

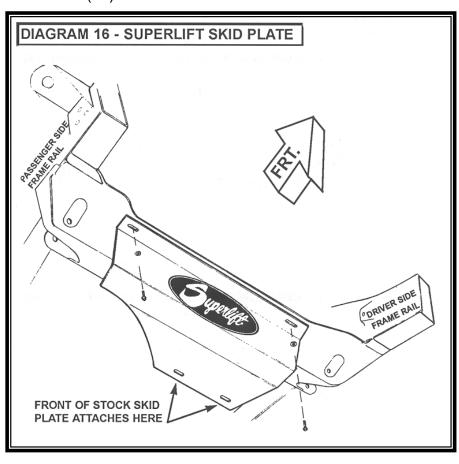


bars into the lower control arms. Be sure the bars are positioned (front/rear end, driver.passenger side) in their original configuration. The rear of the bar ends are now "hanging".

☐ With the crossmember balanced on a floor jack, raise it to mate with the hanging bar ends. Now locate the adjuster arms inside the crossmember and onto the bar ends.

NOTE: This step is a two-man operation.

TORSION BAR CROSSMEMBER BRACKET, #55-07-3215...

□ [Diagram 17] Lubricate adjuster bolt and puller threads prior to installation. Position the two #55-14-3215 brackets in between the bottom of the rails and the top of the crosmember. Invert, as shown, the stamped steel straps that cap the rubber insulators. Position flatwashers against both the bolt heads and nuts. Inset and tighten the

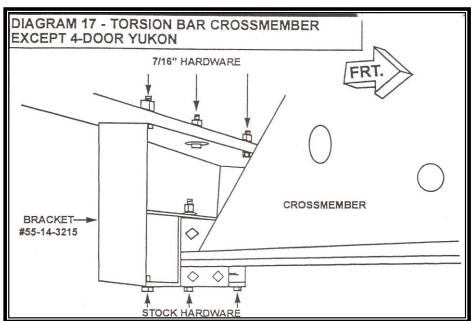

center bolts first, then the outer edge bolts (57). Bar loading sequence is the reverse of step 2; again, be careful. Tighten until arms are just clearing nut blocks.

41) ADJUSTING FRONT RIDE HEIGHT...

- ☐ Manually bounce the front and rear of vehicle to normalize the torsion bars and leaf springs.
- On each side, fully tighten the LCA-to-crossmember bolts (156).
- Position the vehicle on a level surface. Measure from the LCA front pivot bolt center down to the floor. Record this as Measurement "A".
- Now measure from the inside edge of the knuckle (at the lower ball joint boss) down to the floor. Record this as Measurement "B". Subtract Measurement "B" from "A" for the ride height figure. Minimum ride height is 3.08"; maximum is 5.0". Ideal ride height is somewhere in between. Raise height by tightening the torsion bar adjusting bolt; lower height by loosening the bolt. Adjust height 3/8" to 1/2" above the final desired ride height, since the bars will settle slightly after the vehicle is driven.

42) FINAL CLEARANCE and TORQUE CHECK...

☐ With vehicle on floor, cycle steering lock-to-lock and inspect the tires / wheels, and the steering, suspension, and brake systems for proper operation, tightness, and adequate clearance.

NOTE: Exceeding the stated minimum or maximum heights will cause the suspension to continually "top out" or "bottom out". This results in a harsh ride, accelerated suspension component wear, and possibly component failure.

43)	VEHICLE	SPEED	SENSOR	
-----	---------	-------	--------	--

☐ When different height tires are installed, the sppedometer must be recalibrated. Consult your Superlift distributor or Superlift catalog for an appropriate reprogramming device. The device is sold seperately and includes separate installation instructions.

44) SUPERLIFT NAME BADGE AND WARNING DECAL ...

The system includes one 2" x 5" name badge (#0034). Additional and / or larger badges are available from Superlift or a Superlift dealer. We suggest putting the badges on the front fenders, tailgate, or rear window. The badge mounts by means of factory applied, double-backed tape. Follow these instructions to ensure that badge sticks properly:

Clean designated area with warm, soapy water. Rinse and wipe dry with a soft, lint free towel.

Thoroughly prep the area with the furnished alcohol wipe pad and wipe dry with a soft, lint free

	Remove mounting tape backing,	line up badge,	and press in place.	Do not touch mounting
tap	e or allow tape to get dirty.	_		_

towel. Do not touch the surface again with your hands; they transfer body oils.

Press fir	mly on the badge fac	ce and hold a few	seconds to seat m	nounting tape.	A superior
adhesive bo	ond forms over time.	We recommend a	allowing 24 hours	of cure time be	fore washing
and waxing	. The emblem itself	can be cleaned wi	th any glass clear	er.	

Ц	Install the	WARN	NING	TO D	RIVER	dec	cal o	n the insid	le of th	e windshie	ld, or on th	e dash,
with	nin driver's	s view.	Refer	r to the	e "NOTI	CE	TO	DEALER	AND	VEHICLE	OWNER"	section
belo	ow.											

45) HEADLIGHTS...

☐ Readjust headlights to proper setting.

46) Activate four wheel drive system and check front hubs for engagement

47) ALIGNMENT...

Realign vehicle to factory specifications. Record the ride height measurement at time of alignment. If, in the future the torsion bars settle excessively, alignment can be restored by adjusting-up the bars to their original ride height.

48) FRONT DRIVESHAFT...

NOTE: Driveshaft will not clear exhaust crossover pipe.

☐ Reroute a new section of pipe above shaft. If necessary, vehicle can be driven to a muffler shop with the front shaft completely removed. Torque shaft-to-differential bolts (15); shaft-to-transfer case bolts (74).

Limited Lifetime Warranty / Warnings

Your Superlift[®] product is covered by the Limited Warranty explained below that gives you specific legal rights. This limited warranty is the only warranty Superlift[®] makes in connection with your product purchase. Superlift[®] neither assumes nor authorizes any retailer or other person or entity to assume for it any other obligation or liability in connection with this product or limited warranty.

What is covered? Subject to the terms below, Superlift[®] will repair or replace its products found defective in materials or workmanship for so long as the original purchaser owns the vehicle on which the product was originally installed. Your warrantor is LKI Enterprises, Inc. d/b/a Superlift[®] Suspension Systems ("Superlift[®]").

What is not covered? Your Superlift[®] Limited Warranty does not cover products, parts or vehicles Superlift® determines to have been damaged by or subjected to:

- Alteration, modification or failure to maintain.
- Normal wear and tear (bushings, tie-rod ends, etc.). Scratches or defects in product finishes (powdercoating, plating, etc.),
- Damage to or resulting from vehicle's electronic stability system, related components or other vehicle systems.
- Racing or other vehicle competitions or contests. Accidents, impact by rocks, trees, obstacles or other aspects of the environment.
- Theft, vandalism or other intentional damage.

Remedy Limited to Repair / Replacement. The exclusive remedy provided hereunder shall, upon Superlift's inspection and at Superlift's option, be either repair or replacement of product or parts covered under this Limited Warranty. Customers requesting warranty consideration should contact Superlift® by phone (1-800-551-4955) to obtain a Returned Goods Authorization number. All removal, shipping and installation costs are customer's responsibility.

If a replacement part is needed before the Superlift[®] part in question can be returned, you must first purchase the replacement part. Then, if the part in question is deemed warrantable, you will be credited / refunded.

Other Limitations - Exclusion of Damages - Your Rights Under State Law

- Neither Superlift® nor your independent Superlift® dealer are responsible for any time loss, rental costs, or for any incidental, consequential or other damages you may have.
- This Limited Warranty gives you specific rights. You may also have other rights that vary from state to state. For example, while all implied warranties are disclaimed herein, any implied warranty required by law is limited to the terms of our Limited Lifetime Warranty as described above. Some states do not allow limitations of how long an implied warranty lasts and / or do not allow the exclusion or limitation of incidental or consequential damages, so the limitations and exclusions herein may not apply to you.

Important Product Use and Safety Information / Warnings

As a general rule, the taller a vehicle is, the easier it will roll over. Offset, as much as possible, what is lost in rollover resistance by increasing tire track width. In other words, go "wide" as you go "tall". Many sportsmen remove their mud tires after hunting season and install ones more appropriate for street driving; always use as wide a tire and wheel combination as feasible to enhance vehicle stability. We strongly recommend, because of rollover possibility, that the vehicle be equipped with a functional roll bar and cage system. Seat belts and shoulder harnesses should be worn at all times. Avoid situations where a side rollover may occur.

Generally, braking performance and capabilities are decreased when significantly larger / heavier tires and wheels are used. Take this into consideration while driving. Also, changing axle gear ratios or using tires that are taller or shorter than factory height will cause an erroneous speedometer reading. On vehicles equipped with an electronic speedometer, the speed signal impacts other important functions as well. Speedometer recalibration for both mechanical and electronic types is highly recommended.

Do not add, alter, or fabricate any factory or aftermarket parts to increase vehicle height over the intended height of the Superlift product purchased. Mixing component brands is not recommended.

sole property of or licensed to Superlift[®]. Any reproduction of said materials, in part or in whole, with out the express written permission of Superlift[®] is strictly forbidden. Superlift[®], Rockrunner[™], Swamprunner[™], Superide[™], Superide SS[™] and SSR[™], Black Diamond[®], XCL[™], X2[™] Super Trac[™], Torque Max[™], Torque Max SS[™], eXtreme Ring[™], Rail Wrap[™], Bullet Proof Brake Hose[™], TruSpeed[™], Frame Integrated Technology[™], F.I.T. Series[™] and Rock Fink[™] are registered trademarks of Superlift[®] Suspension Systems. Superlift[®] Suspension Systems is a Division of Bret Lovett's Lift Kits Incorporated.

SUPERLIFT SUSPENSION SYSTEMS

300 Huey Lenard Loop Rd.
West Monroe, Louisiana 71292
Phone: (318) 397-3000
Sales / Tech: 1-800-551-4955
FAX: (318) 397-3040
www.superlift.com