



Assembly, Installation, Operation and Maintenance Instructions

KIT, SERVICE, 16K HUSKY-10, PIVOT PLATE AND HARDWARE


Part # 31803

Dealer / Installer: Provide a copy of these Instructions to the end user of this product. These Instructions provide important operating and safety information for proper usage of this product. Demonstrate the proper use of the product with the end user. Have the end user demonstrate that they understand the proper use of the product.

End User: Read and follow all instructions included in this manual. Ask your Dealer / Installer for assistance if you do not understand the proper use of the product. Never remove any decals from the product.

Parts List

Item	Description
1	1/4-20 Hex Bolt
2	1/4" Lock Washer
3	1/4" Flat Washer
4	Pivot Plate

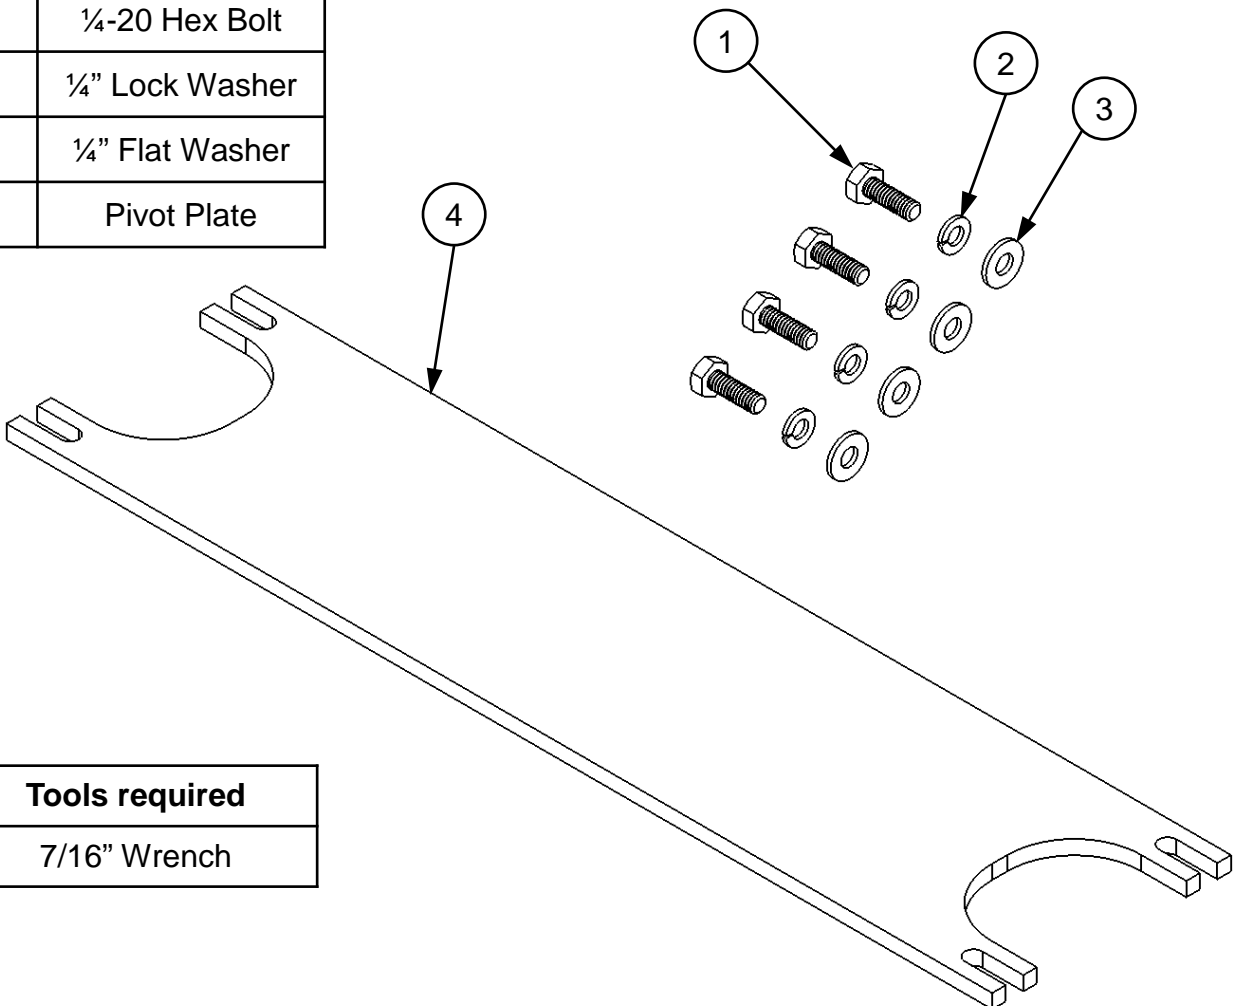

Tools required

7/16" Wrench

Installation Instructions:

1. Remove (4) ¼-20 Hex bolts, lock washers, flat washers labeled (A)
2. Remove pivot plate labeled (B)
3. Set new pivot plate on flats of flippers labeled (C)
4. Install (4) new ¼-20 Hex bolts, lock washers and flat washers labeled (A)
5. Center pivot plate left to right.
6. Align side surface of flippers labeled (C) to inside of housing labeled (D)
7. Tighten ¼-20 Hex bolts labeled (A)

