



### STEP 1 – PRIOR TO INSTALLATION

- A) Bushwacker only approves installing the flares according to these written instructions with the hardware provided. WARNING:** Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to using alternative installation methods, hardware, or materials. **DO NOT USE:** Loctite, SuperGlue, or similar products on the hardware or the flares.
- B) Fit:** Verify the fit of the flares to vehicle. (Some filing, sanding, or cutting may be necessary to ensure proper fit).
- C) Painting:** (Optional) if paint is desired it must be done prior to installing flares on vehicle. Clean outer surface with a good grade degreaser. **DO NOT USE LACQUER THINNER OR ENAMEL REDUCER AS A DEGREASER.** Wipe outer surface thoroughly with a tack rag prior to paint. Application of plastic adhesion promoter for ABS plastic as per your paint system manufacturer’s recommendations is required. Paint flares using a high quality enamel, or polyurethane automotive paint. If painting edge trim (not recommended), use a flex additive.
- D) Performance:** Using larger Tires may increase the area required to turn the vehicle. Some Tire/Rim combinations may require lowering bump stops and or installing steering stops to prevent tire from contacting flare.
- E) Exhaust System:** Modifications may be necessary to maintain a minimum 4” clearance between flares and exhaust pipes. (Exhaust gases should not vent directly onto flares)
- F) Metal Protection:** All exposed fasteners and bare metal should be treated with rust resistant paint **BEFORE** installing flares. Spray inner fender wells with undercoating **AFTER** flare attachments have been completed.
- G) Decals:** Flares may interfere with existing decals on vehicle. If you wish, remove decals prior to installation of flares.

## Ford OE Style® Fender Flares Front Pair

Set Part #20095-02

Rev-0 10/30/2014

For complete fitment info visit : [www.bushwacker.com](http://www.bushwacker.com)




### TOOLS FOR EASY INSTALLATION:

- Utility Knife
- #2 Phillips Driver
- 1/2” Wrench
- Socket Wrench
- 7/32” Socket
- 9/32” Socket
- 10mm Socket
- Grease Pencil

### LIMITED LIFETIME WARRANTY AGAINST ANY MANUFACTURING DEFECTS

- To claim a warranty, you must provide Proof of Purchase.

## Included in Hardware Kit:

- |   |   |   |   |  |   |
|---|---|---|---|--|---|
| 1.  | 2.  | 3.  | 4.  | 5.   | 6.  |
|  |  |  |  |  |  |
| CL1-0022,<br>#10 “U” Clip,<br>6 pcs   | CL1-0009,<br>Long “U” Clip,<br>Magni 565<br>10 pcs                                  | MT1-0034,<br>1” x1.5” x.06”<br>Blk 3M Foam Tab,<br>10 pcs                           | SW1-0058,<br>#10 x 5/8” Phillips<br>SS Truss Screw,<br>16 pcs                       | GP1-0007,<br>Med. Wiper Style<br>Edge Trim,<br>158 inches                            | ET1-0002,<br>Edge Trim Tool,<br>1 pc  |

# Component List:



Left Front Flare



Right Front Flare



Left Rear Flare



Right Rear Flare



Left Front Inner Piece



Right Front Inner Piece

## STEP 2 - EDGE TRIM INSTALLATION

A. Peel two to three inches of red vinyl backing away from Edge Trim (GP1-0007) tape. Applying the adhesive side of the edge trim to the inner side of the flare, affix the edge trim to the top edge of the flare (the portion that comes in contact with the vehicle).

B. Press edge trim into place along the top edge of the flare in one-foot increments, pulling red vinyl backing free as you continue to work your way around the top edge of the flare.



Inner Flare Surface

## Front Flare Installation Procedures (Passenger's Side):



1

Remove five factory screws with a  $7/32$ " socket wrench. Remove two rear most factory screws with  $9/32$ " socket wrench. *Save screws for reinstallation.*



2

Hold flare to vehicle and mark one flare hole location with a grease pencil.



Wrap a Foam Tab (MT1-0034) around the wheel well sheet metal, centered over the mark made in Step 2.



Install a Clip (CL1-0009) over the Tab (MT1-0034) placed in Step 3.



Attach 3 "U"clips (CL1-0022) to the inner bracket as shown.



Line up the holes in the inner piece with the three uppermost factory holes. *NOTE: Driver's side inner piece is marked with an "LR" and passenger's side inner piece is marked with an "RR".*



Using a 7/32" socket wrench, reinstall the factory screws through the inner piece.



Position flare on fender, pressing inward on the flare, line up the flare mounting holes with the mounting clips on the inner piece. Install 3 Phillips Truss Screws (SW1-0058) through the flare and into the clips on the inner piece. Do not tighten. (3 locations)






Still holding flare to fender, re-install remaining factory screws removed in Step 1 using 7/32" and 9/32" sockets and wrench. Install supplied screw (SW1-0058) into Clip (CL1-0009). Tighten all screws.



Completed front flare installation.

## Edge Trim Tool Procedures:

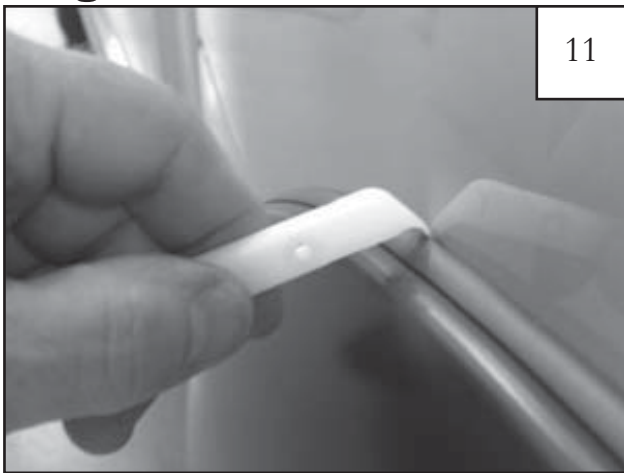

Using supplied Edge Trim Tool (ET1-0002), seat edge trim against vehicle by hooking curved end under edge trim at one end of flare. Next, slide around outer edge of flare to the other end.



Using flat end of supplied Edge Trim Tool (ET1-0002), seat edge trim against flare by inserting straight end between edge trim and flare at one end. Next, slide around entire edge to the other end.