



STEP 1 – PRIOR TO INSTALLATION

- A)** Bushwacker® only approves installing the Trail Armor according to these written instructions with the hardware provided. **WARNING:** Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to using alternative installation methods, hardware, or materials. **DO NOT USE:** Loctite, SuperGlue, or similar products on the hardware or the flares.
- B)** Wash and completely dry the vehicle before installation. Dirt and debris will negatively affect this product's adhesion to the vehicle surface.

Jeep JL Trail Armor® Corner Guard

Set Part #14084

BW14084 Rev-0 06-20-2018

For complete fitment info visit: www.bushwacker.com

TOOLS FOR EASY INSTALLATION:

- Cleaning cloth
- Screwdriver
- 10mm Nutdriver



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



LIMITED LIFETIME WARRANTY AGAINST ANY MANUFACTURING DEFECTS

- To claim a warranty, you must provide Proof of Purchase.

Included in Hardware Kit:

1.




ALCOHOL
PREP
PAD
2 pcs.

Installation Procedures



Open rear hatch.

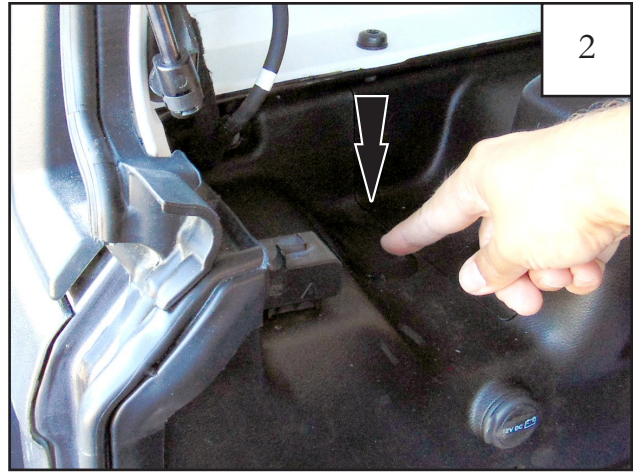

Beginning in the driver side rear corner, locate the small plastic door that is covering the tail light retaining bolt.



Use a screwdriver to pry open the cover for the tail light retaining bolt.



Tail light retaining bolt exposed.



Use a 10mm nutdriver to remove the tail light retaining bolt.



Carefully pull the tail light assembly away from the vehicle.

7



Carefully pull the red tail light harness release switch in the direction indicated.

8




Use a screwdriver to fully disconnect the wiring harness and set tail light assembly aside.

9



Test fit the Corner Guard in place. Take note of where the red tape liner aligns with the vehicle body.

10

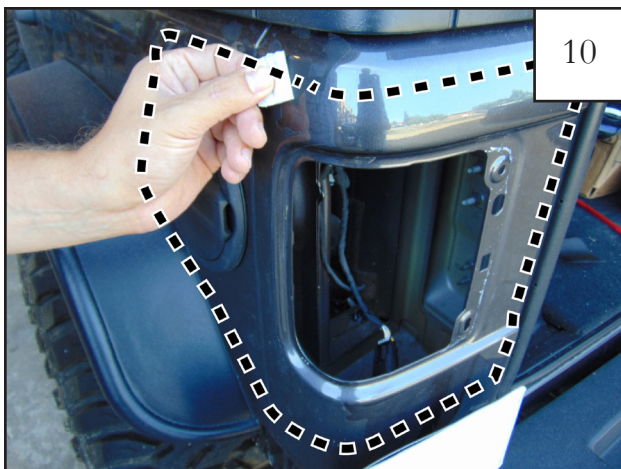

Clean the surface where the tape will contact the vehicle body using the enclosed alcohol pads.

11



Peel back 2" of red tape liner on all flanges to expose adhesive and create a pull tab.


12



Position the Corner Guard in place and align with the previously cleaned surface. Ensure that the red tape pull tabs are all accessible. Apply pressure to exposed tape.



With the Corner Guard in its final position, begin pulling tape tabs to remove remaining tape liners. Proceed in a clockwise patten, beginning with the upper left hand side as shown above.

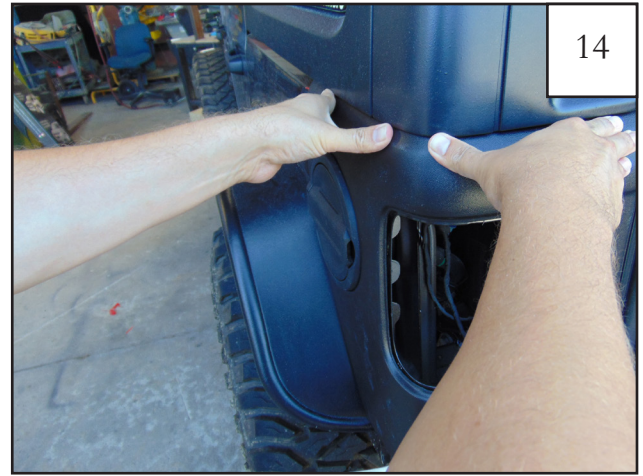

Apply FIRM pressure to all flanges to ensure proper adhesion.



Reverse **Steps 2 thru 8** to reinstall tail lamp assembly.



Repeat **Steps 1 thru 15** to install passenger side Trail Armor.