


1. Open hood.
2. If equipped, remove and discard rubber trim piece from front edge of hood.
3. Install (2) brackets on outboard hood shield flanges using machine screws and black washers.
4. Align holes in hood shield with holes in hood in order to center part in place. Note the location where the brackets will align with hood edge and mark with a grease pencil. Remove hood shield.
5. Center a piece of protective film over each grease pencil mark, and wrap around the hood edge.
6. Position hood shield back in place on hood. Ensure that the holes in hood shield are properly aligned with the holes in the hood and that the bracket aligns with the protective film.
7. Slide brackets over hood edge, ensuring that they are centered on the protective film previously installed in **Step 6**.
8. Insert (4) fasteners through the hood shield and into the hood and securely tighten. **DO NOT OVER TIGHTEN.**
9. Close hood and Install (4) bump ons at pre-cleaned locations on the painted hood surface.

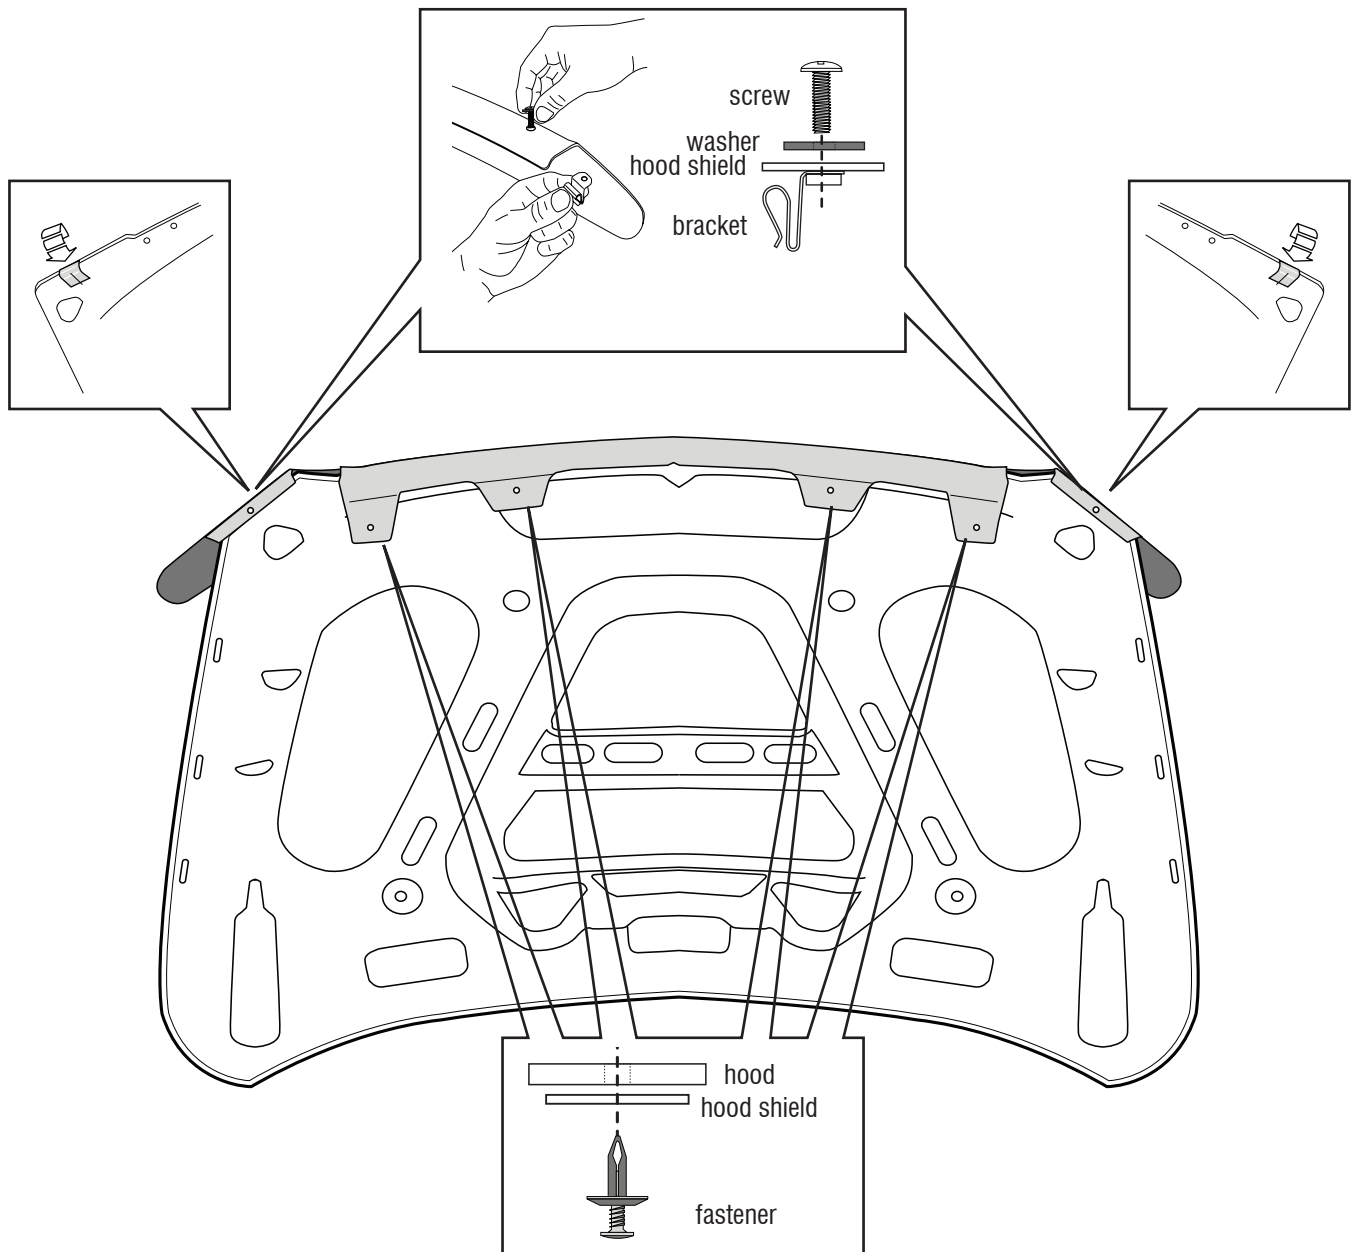

IMPORTANT: Before driving, ensure the hood shield is properly secured to vehicle. Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.