
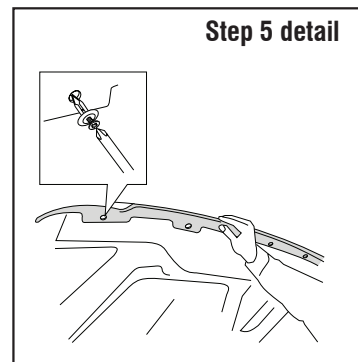
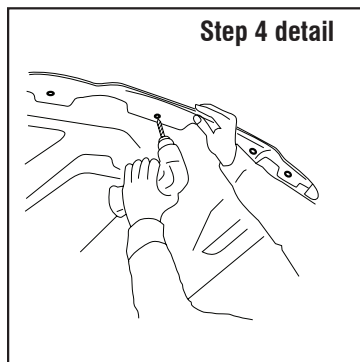


1. Open hood.
2. Remove tape liner from each end of bottom flange.
3. Align hood shield on hood. With hood shield in its final position, apply pressure to the tabs to secure the tape to the hood.
4. Using a 1/4" drill bit, drill (4) holes into the underside of the hood at the predrilled locations on the hood shield.
NOTE: Use caution not to push too hard with drill and puncture outer hood surface! (See detail below.)
5. Secure the hood shield to the hood with (4) screw fasteners. (See detail below.)
6. Apply 4 bump on's to hood surface.

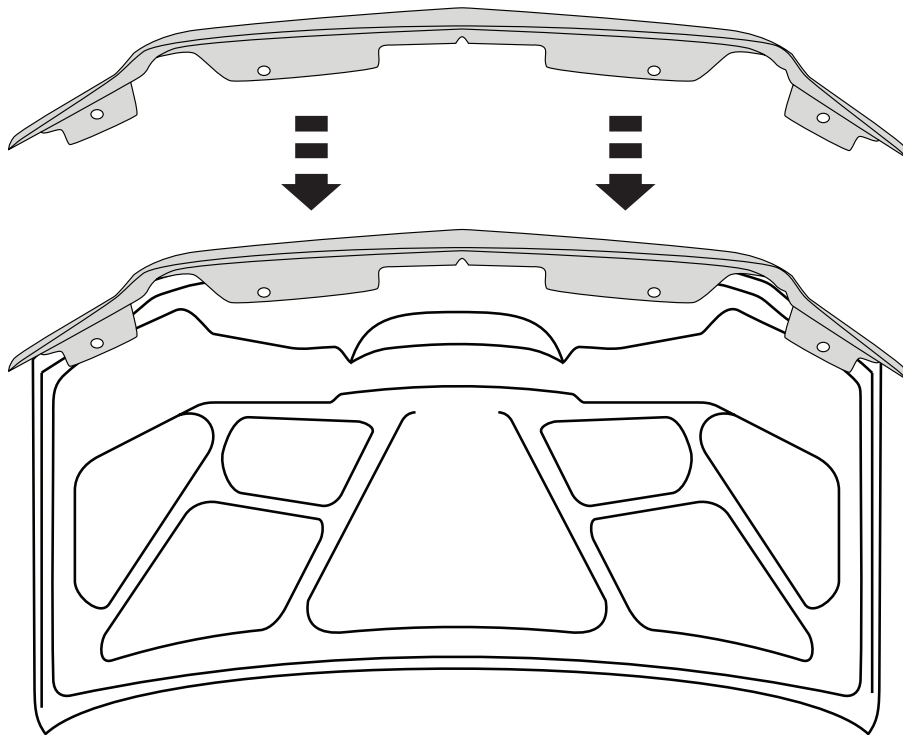

IMPORTANT: Before driving, ensure the hood shield is properly secured to vehicle. Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.