


70°-100° F (Install temp.)

- 1 Clean rubber, black, or chrome trim and mirror cap with alcohol pad where visor will attach. If Scotch Brite scuff pad included scuff rubber trim.
- 2 Remove tape liner from front and rear flanges and peel back 2" from each end of top flange.
- 3 Align/Attach front flange to mirror cap. (Front end flange may overlap mirror cap depending on vehicle style.) Align top and rear flanges to trim.
- 4 Remove tape liner by pulling on free ends. Apply pressure to flanges to secure and ensure adhesion to trim surface.
- 5 The rear visor attaches with the same preparation methods as the front visor.

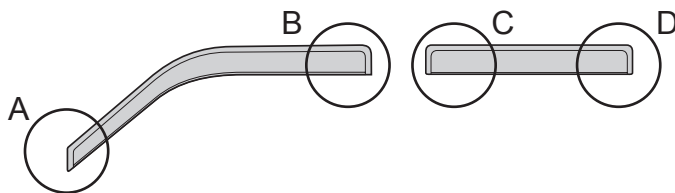

IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219



70°-100° F (Install temp.)

- 1 Clean rubber, black, or chrome trim and mirror cap with alcohol pad where visor will attach. If Scotch Brite scuff pad included scuff rubber trim.
- 2 Remove tape liner from front and rear flanges and peel back 2" from each end of top flange.
- 3 Align/Attach front flange to mirror cap. (Front end flange may overlap mirror cap depending on vehicle style.) Align top and rear flanges to trim.
- 4 Remove tape liner by pulling on free ends. Apply pressure to flanges to secure and ensure adhesion to trim surface.
- 5 The rear visor attaches with the same preparation methods as the front visor.



IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219