



STAMPEDE™ AUTOMOTIVE ACCESSORIES

SIDEWIND DEFLECTOR INSTALLATION and CLEANING


I - Sheet Number STMPD123 Rev.C

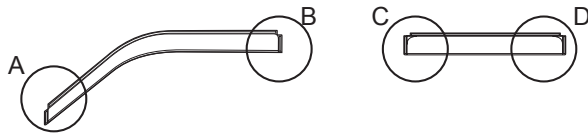

The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



- 1 Clean the window channel with an alcohol pad.
- 2 Peel back 2" of tape liner from each end of top flange.
- 3 Insert visor into window channel, rear flange first. Insert rear flange between rubber trim and door post. Insert front flange between the rubber door trim and the metal door frame. The top flange slides into the window channel.
- 4 Remove tape liner by pulling on free ends. Raise window slowly and leave up for 24 hours to secure visor to window channel.
- 5 Install the rear visors using the same preparation and installation methods as the front visor. Note that front & rear flange fit between the rubber & post.


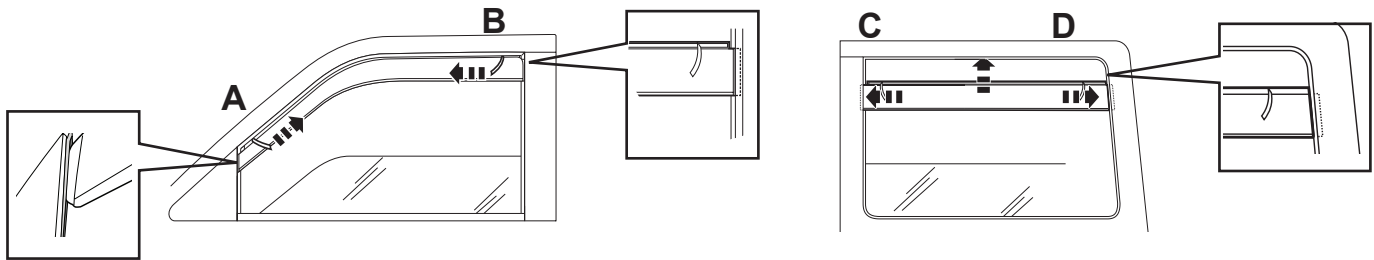


IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-858-5634

STAMPEDE™ AUTOMOTIVE ACCESSORIES

SIDEWIND DEFLECTOR INSTALLATION and CLEANING


I - Sheet Number STMPD123 Rev.C

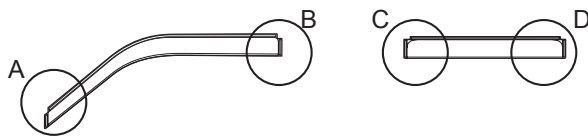

The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



- 1 Clean the window channel with an alcohol pad.
- 2 Peel back 2" of tape liner from each end of top flange.
- 3 Insert visor into window channel, rear flange first. Insert rear flange between rubber trim and door post. Insert front flange between the rubber door trim and the metal door frame. The top flange slides into the window channel.
- 4 Remove tape liner by pulling on free ends. Raise window slowly and leave up for 24 hours to secure visor to window channel.
- 5 Install the rear visors using the same preparation and installation methods as the front visor. Note that front & rear flange fit between the rubber & post.

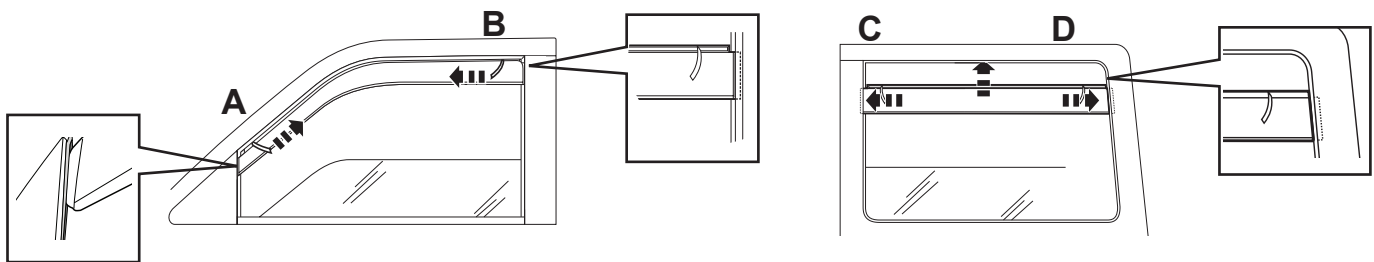

IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-858-5634