

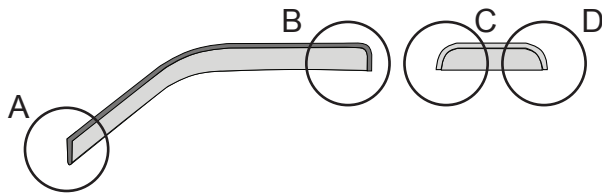
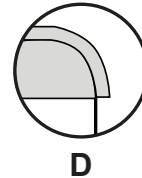
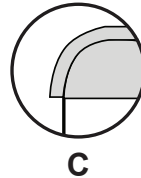


Front visor is designed to be placed inside the window channel. Rear visor attaches directly to painted surface.

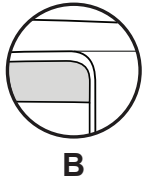


70°-100° F (Install temp.)

- 1 Lower driver's side window.
- 2 Buff inside felt surface of window channel with Scotch Brite pad, and clean with alcohol pad.
- 3 Remove tape liner from front & rear flanges. Peel back 2" of tape liner from each end of top flange.
- 4 Slide the front end flange of the visor inside window channel. Then slide top and rear end flanges into position inside channel.
- 5 With visor in final position, remove remaining tape liner by pulling on free ends.
- 6 Run your finger along inside of window channel to ensure proper adhesion of taped flange to felt surface. Roll window up, and allow 24 hours for adhesive to cure.
- 7 If applicable, rear visor attaches directly to painted surface.

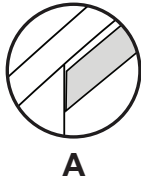





IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219

Front visor is designed to be placed inside the window channel. Rear visor attaches directly to painted surface.

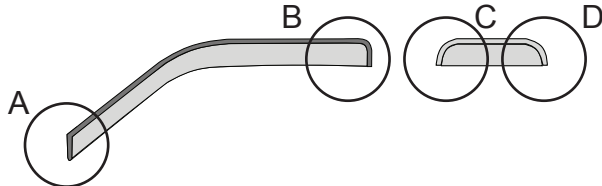

70°-100° F (Install temp.)

- 1 Lower driver's side window.
- 2 Buff inside felt surface of window channel with Scotch Brite pad, and clean with alcohol pad.
- 3 Remove tape liner from front & rear flanges. Peel back 2" of tape liner from each end of top flange.
- 4 Slide the front end flange of the visor inside window channel. Then slide top and rear end flanges into position inside channel.
- 5 With visor in final position, remove remaining tape liner by pulling on free ends.
- 6 Run your finger along inside of window channel to ensure proper adhesion of taped flange to felt surface. Roll window up, and allow 24 hours for adhesive to cure.
- 7 If applicable, rear visor attaches directly to painted surface.

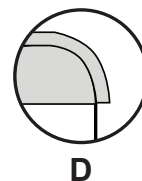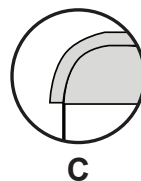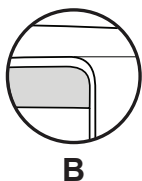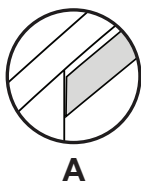

IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219