



# STAMPEDE™ AUTOMOTIVE ACCESSORIES

## SIDEWIND DEFLECTOR INSTALLATION and CLEANING


I - Sheet Number STMPD143 Rev.B

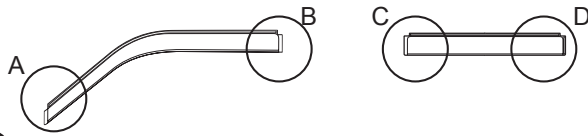

The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



- 1 Roll down window. Buff the inside felt surface with scotch brite pad. Then clean with alcohol pad. **NOTE:** visors mount on the **inside** of the window channel.
- 2 Remove tape liner from front flange. Peel back 2" (5 cm) of tape line from each end of top flange.
- 3 Insert visor into window channel, rear flange first. Rear flange inserts between the trim and the exterior surface. The front & top flange slides into the window channel.
- 4 Remove tape liner by pulling on free ends.
- 5 Press the exposed area of tape against the surface and verify position.
- 6 Continue to apply pressure to ensure that the visor remains properly seated inside the window channel as window is slowly closed. Leave window up for 72 hours to secure visor to window channel.
- 7 Install the rear visor using the same preparation and installation methods as front visor. Note that the top & rear flanges slide into the window channel, and the front flange fits between the rubber & window frame. Repeat **steps 1 thru 7** for passenger side


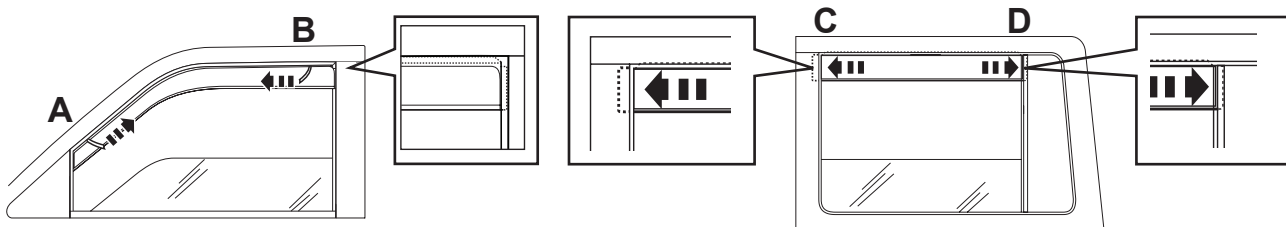


**IMPORTANT:** Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.  
Stampede Automotive Products • Visit us at [stampedeproducts.com](http://stampedeproducts.com) • 800-858-5634

# STAMPEDE™ AUTOMOTIVE ACCESSORIES

## SIDEWIND DEFLECTOR INSTALLATION and CLEANING


I - Sheet Number STMPD143 Rev.B

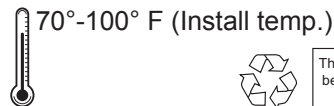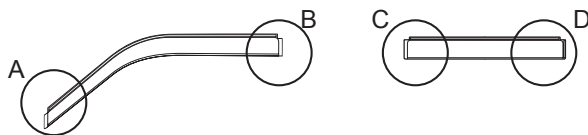

The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



- 1 Roll down window. Buff the inside felt surface with scotch brite pad. Then clean with alcohol pad. **NOTE:** visors mount on the **inside** of the window channel.
- 2 Remove tape liner from front flange. Peel back 2" (5 cm) of tape line from each end of top flange.
- 3 Insert visor into window channel, rear flange first. Rear flange inserts between the trim and the exterior surface. The front & top flange slides into the window channel.
- 4 Remove tape liner by pulling on free ends.
- 5 Press the exposed area of tape against the surface and verify position.
- 6 Continue to apply pressure to ensure that the visor remains properly seated inside the window channel as window is slowly closed. Leave window up for 72 hours to secure visor to window channel.
- 7 Install the rear visor using the same preparation and installation methods as front visor. Note that the top & rear flanges slide into the window channel, and the front flange fits between the rubber & window frame. Repeat **steps 1 thru 7** for passenger side

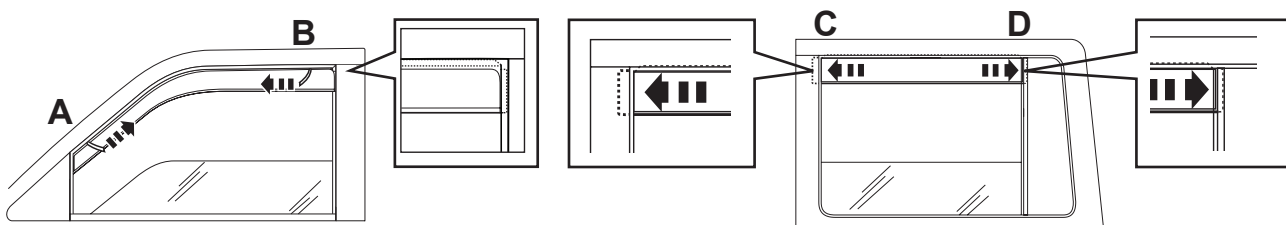

**IMPORTANT:** Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.  
Stampede Automotive Products • Visit us at [stampedeproducts.com](http://stampedeproducts.com) • 800-858-5634