


70°-100° F (Install temp.)

- 1** This product is designed to be placed inside the window channel. Lower the window. Buff the inside surface of the window channel with Scotch -Brite pad then clean with alcohol pad.
- 2** Remove the tape liner from the front and rear flanges. Peel back 2" of tape liner from each end of top flange.
- 3** Insert visor into window channel, rear flange first.
- 4** Remove tape liner by pulling on free ends. Raise window slowly and leave up for 24 hours to secure.
- 5** Install rear visor using same method as front. Note that rear flange fits **between the rubber and the post**.

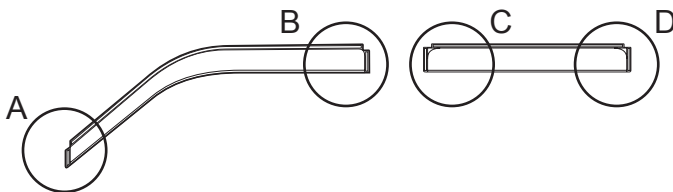


IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219



70°-100° F (Install temp.)

- 1** This product is designed to be placed inside the window channel. Lower the window. Buff the inside surface of the window channel with Scotch -Brite pad then clean with alcohol pad.
- 2** Remove the tape liner from the front and rear flanges. Peel back 2" of tape liner from each end of top flange.
- 3** Insert visor into window channel, rear flange first.
- 4** Remove tape liner by pulling on free ends. Raise window slowly and leave up for 24 hours to secure.
- 5** Install rear visor using same method as front. Note that rear flange fits **between the rubber and the post**.

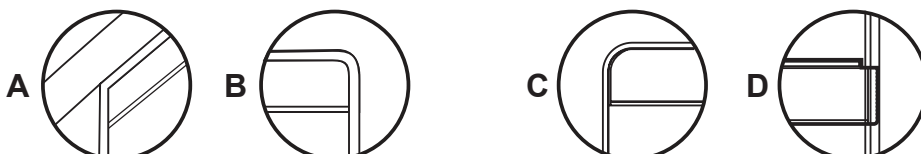

IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219