




The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



- 1 Clean the window channel with an alcohol pad.
- 2 Remove tape liner from front flange. Peel back 2" (5 cm) of tape liner from each end of top flange.
- 3 Insert visor into window channel, rear flange first. Rear flange inserts between the trim and the exterior surface. The front & top flange slides into the window channel. **NOTE:** It may be necessary to pull the window channel out at the rear to seat the rear flange.
- 4 Remove tape liner by pulling on free ends. Raise window slowly and leave up for 24 hours to secure visor to window channel. **NOTE:** Turn "Automatic Up" feature off if applicable. Refer to owners manual for instruction on how to turn "automatic Up" feature off.
- 5 Install the rear visors using the same preparation and installation methods as the front visor. Note that front & rear flanges fit between the window trim & exterior surface. **NOTE:** It may be necessary to pull the front and rear window channel out to seat the front and rear flanges.

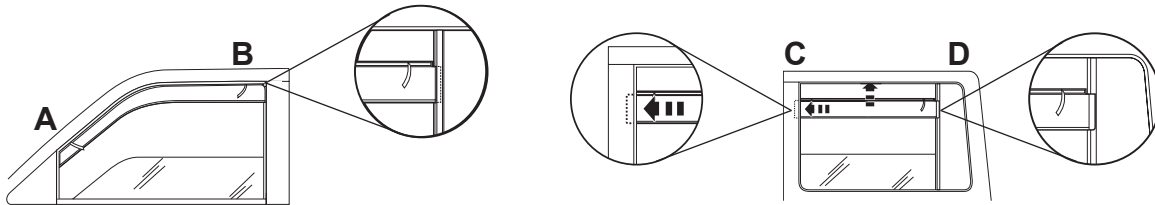


IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-858-5634

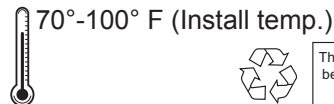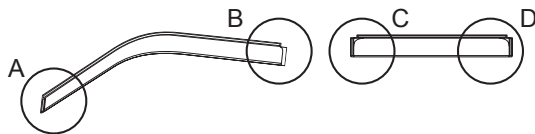

The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



- 1 Clean the window channel with an alcohol pad.
- 2 Remove tape liner from front flange. Peel back 2" (5 cm) of tape liner from each end of top flange.
- 3 Insert visor into window channel, rear flange first. Rear flange inserts between the trim and the exterior surface. The front & top flange slides into the window channel. **NOTE:** It may be necessary to pull the window channel out at the rear to seat the rear flange.
- 4 Remove tape liner by pulling on free ends. Raise window slowly and leave up for 24 hours to secure visor to window channel. **NOTE:** Turn "Automatic Up" feature off if applicable. Refer to owners manual for instruction on how to turn "automatic Up" feature off.
- 5 Install the rear visors using the same preparation and installation methods as the front visor. Note that front & rear flanges fit between the window trim & exterior surface. **NOTE:** It may be necessary to pull the front and rear window channel out to seat the front and rear flanges.

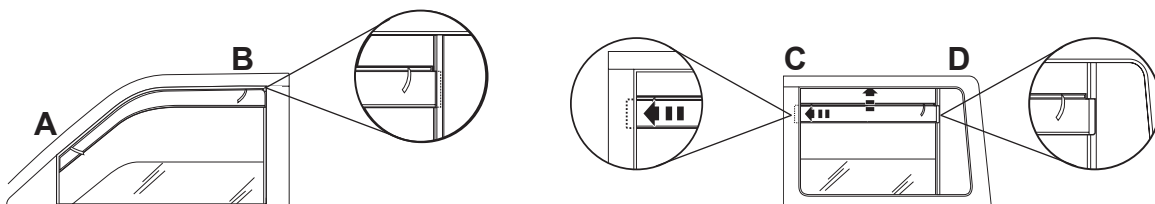

IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-858-5634