



B&W Trailer Hitches

1216 Hawaii Road / PO Box 186

Humboldt, KS 66748

P:620.473.3664

F:620.473.3766

NOTE: *we recommend reading instructions before beginning the installation.*

Spacer Bracket Kit 3206 Installation Instructions
For use in conjunction with 3200 Universal Rail Kit.

Model 3206


Call or Email us for Installation Support

hitches@turnoverball.com www.turnoverball.com

TOOLS REQUIRED FOR 3200 & 3206 INSTALLATION
 3/16" DRILL BIT 17/32" DRILL BIT 3/4" SOCKET AND WRENCH 100 lb-ft TORQUE WRENCH

3206 HARDWARE KIT	QTY:
14 - 3/16" Slotted Spacer	8

3200 HARDWARE KIT	QTY:
1 - Carriage bolt 1/2-13 x 2"	10
2 - Mounting rail	2
3 - 5/16 Slotted spacer	10
4 - Block spacer	2
5 - Short mounting bracket	2
6 - Flat washer	10
7 - Lock washer	18
8 - Finish nut	18
9 - Knurled bolt	8
10 - Long mounting bracket	2
11 - Carriage bolt 1/2-13 x 4-1/2	2
12 - Tube spacer	2
13 - Fish wire (Not shown)	2

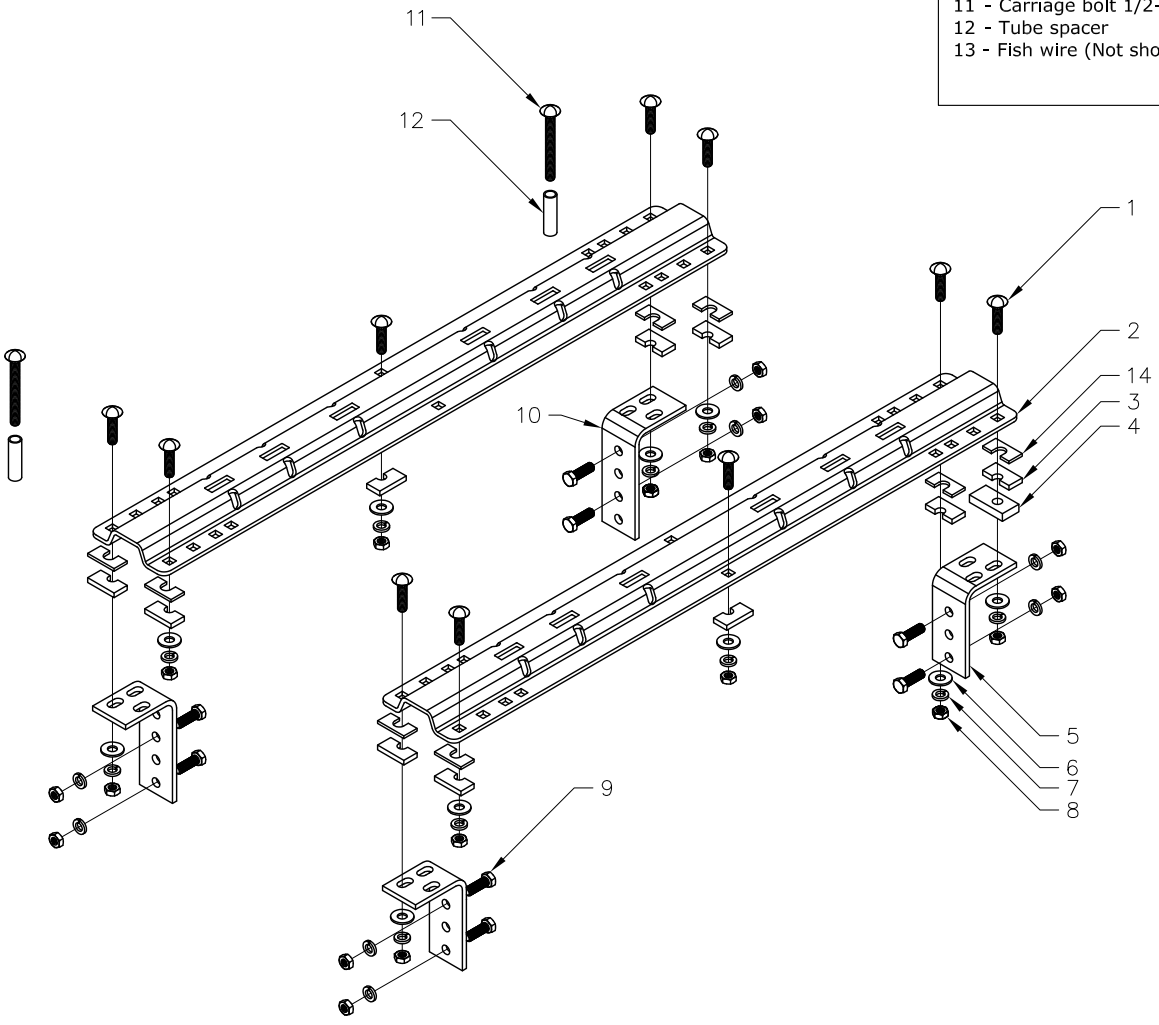

Bracket kit 3206 for TOYOTA TUNDRA 2000 to 2006 (STANDARD CAB LONG BOX ONLY)


Read these instructions completely and also pages 1 & 2 of 3200 universal rail instructions before beginning installation. Failure to do so could result in significant vehicle damage.

CAUTION:

Check for obstructions below the truck bed before drilling. Failure to do so could result in damaged fuel or brake lines, structural members, etc. B&W does its best to communicate tow vehicle manufacturer changes; however, it is ultimately the responsibility of the installer to prevent damage due to installation.

NOTE: For Toyota Tundra application, part #3206 spacer kit is required. Stack (1) 3/16" and (1) 5/16" thick slotted spacer to avoid crushing of truck bed.

Only one of the two holes in the center of each of the base rails is necessary, check for obstructions before drilling.

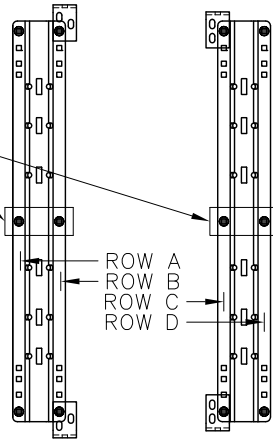

TOP VIEW

DISTANCE FROM EDGE OF RAIL TO END OF BED

LONG BED (ONLY): 32-1/2"

