

## INSTALLATION INSTRUCTIONS

### 4026 SIDE BAR

07-13 CHEV. TAHOE 4 DR. / 07-13 CHEV. YUKON 4 DR. 1/2 TON.

#### Parts List:

##### QTY

1.-( 1 ) Sidebar set

(Driver & Passenger)

2.-( 2 ) Front mounting brackets

3.-( 2 ) Central mounting brackets

4.-( 2 ) Rear mounting brackets

6.-( 4 ) Rondanas separadoras

(1) Hardware kit including:

5.-( 6 ) M12 x 120mm Hex head bolt

7.-( 4 ) 1/2 x 2" Hex head bolt

8.-( 10 ) 1/2" Flat washer

9.-( 10 ) 1/2" Lock washer

10.-( 2 ) 3/8 x 1 1/4" Hex head bolt

11.-( 2 ) 3/8" Flat washer

12.-( 2 ) 3/8" Lock washer

#### Tools required:

3/4" Socket

19 mm Socket

Extension

Ratchet

18 mm Socket

9/16" Socket

21 mm Socket

3/4 Wrench

#### Instructions:

Aproximated installation time: 30 min.

1. Read and understand instructions completely before beginning installation.

2. Remove driver side body mount bolts located under cab of vehicle. Attach front bracket as shown. Leave loose. NOTE: Keep existing washer and rubber bushing in place. NOTE: For 06-Up vehicles, use existing factory body mount bolts. Bolts and washers in kit are not required.

3. Attach center bracket with two spacer washers between bracket and existing rubber bushing and washer. Attach rear bracket as shown.


4. Attach step bar to brackets using 1/2" and 3/8" fasteners as shown.

5. Repeat for passenger side.

6. Align the side bars and all brackets and make any final adjustment and tighten all bolts ( on both sides of vehicle ).

7. Check and re-tighten all bolts periodically.

#### Assembly Diagram:

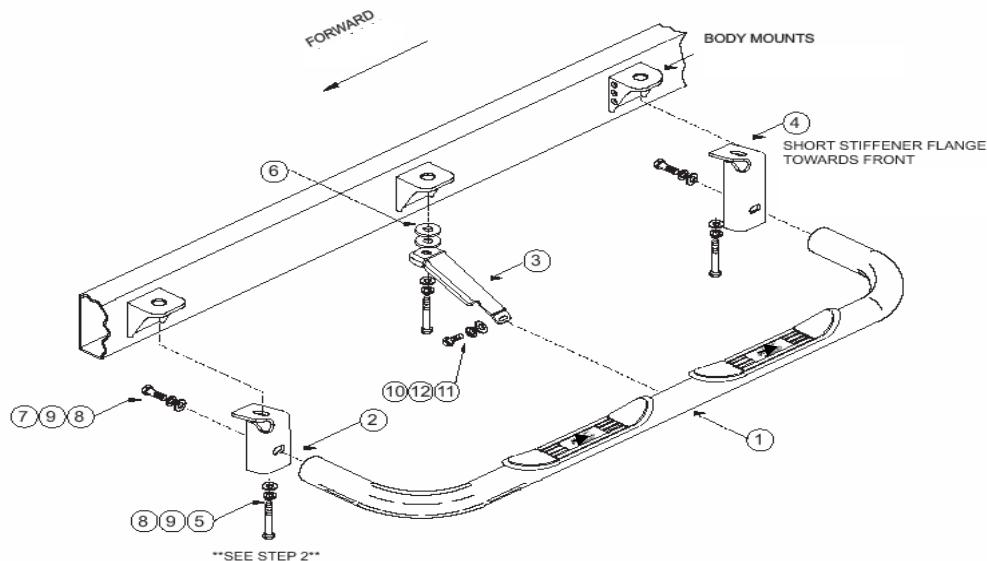

#### Cleaning and care instructions:

Diseño:

Calidad:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

Revised 02/Nov/2005

G:\Usuarios\Diseno\Instructivos PDF\37s\37176 - 37201-I.Pdf