
## INSTALLATION INSTRUCTIONS PART#4172(B-C-PS)

## 99 – 13 Ford Super Duty P.U. (F-250HD, F-350, F-450 & F-550) Regular Cab

Parts List : QTY (1) Sidebar set (Driver & Passenger) (2) Mounting bracket set (Driver & Passenger)	<ul> <li>(1) Hardware kit including :</li> <li>(4) 1/2 x 2" Hex hea</li> <li>(4) 1/2" Flat washer</li> <li>(4) 1/2" Lock washe</li> <li>(12) 3/8 x 1 1/2" Hex</li> <li>(20) 3/8" Flat washer</li> <li>(12) 3/8" Lock washe</li> <li>(8) 3/8" Hex nut</li> <li>(4) 3/8" Clip nut</li> </ul>	r head bolt
	t" Socket ttchet	
<ol> <li>Sidebar set consist of a dri</li> <li>Install the clip nut into the installation as shown in Illu</li> <li>Place mounting bracket ar the existing holes using 3/4</li> <li>Place the sidebar up to th washer. Leave loose. Illust</li> </ol>	stration 1. Ind secure to the clip nut using 3/8" hex head 8" hex head bolt, flat & lock washers and hex he mounting brackets and bolt to the mount tration 3. Is to the alignment of the sidebar and tighten a	ate the correct side before installation. anel. The front and rear top hole patterns will be used for this bolts, with corresponding washers. Bolt mounting brackets to nut. Leave loose. Illustration 2. Ing brackets using the 1/2 x 2" hex head bolt, flat and lock
Assembly Diagram :		
	Illustration 1	Illustration 2
Clip nut	Rocker panel	3/8 x 1 1/2" Hex head bolts Clip nut Clip vit Clip v

## INSTALLATION INSTRUCTIONS PART#4172(B-C-PS)

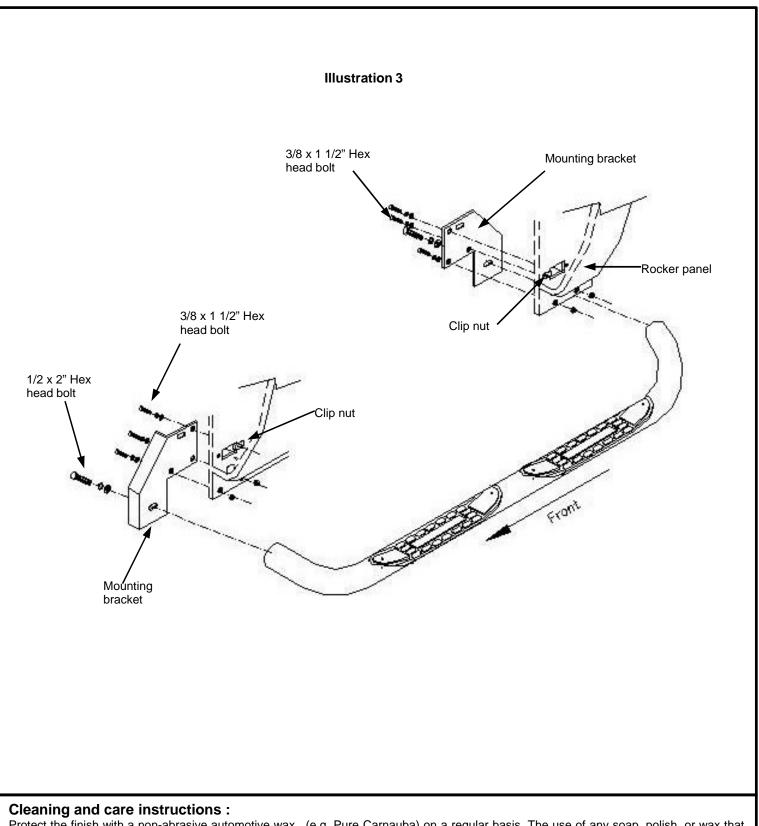

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scracht the finish and cause corrosion.