

12239

05-CURRENT BUICK ALLURE
97-06 BUICK CENTURY PASSENGER

05-CURRENT BUICK LA CROSSE
98-02 OLDSMOBILE INTRIGUE

11/17/2020

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 3500 LBS. TRAILER WEIGHT & 350 LBS. TONGUE WEIGHT.


*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY AUXILIARY STABILIZING STRAPS.



**** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY****

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-877-287-8634

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	4	CM-SP1	.250 x 1.50 x 2.00" SQUARE HOLE SPACER
2	4	10-10278	BOLT,CAR,1/2-13 UNC,1-1/4,GRD8,YZ
3	4	20-00062	NUT, SER-FLANGE,1/2-13 UNC,GRD8,YZ
4	4	30-00133	WASHER,FLAT,1/2,YZ
5	2	30-00153	WASHER,LOCK,1/2,YZ
6	2	10-10470	HHCS,1/2-13 UNC,1-1/4,GRD8,YZ
7	2	20-00174	NUT,HANDLE,1/2-13 UNC,GRD8,CZ
8	4	CM-SP35	.188 x 1.00 x 2.38" ROUND HOLE SPACER
9	4	20-00103	NUT,SER-FLANGE,7/16-14 UNC,GRD8,YZ
10	1	1_2 FISHWIRE	1/2" FISHWIRE
11	4	10-10215	HHCS,7/16-14 UNC,1,GRD5

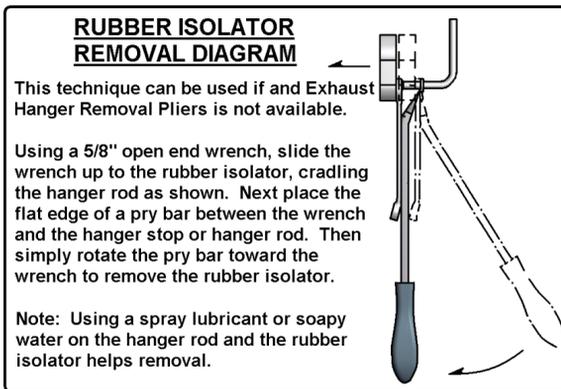

FRONT
REAR

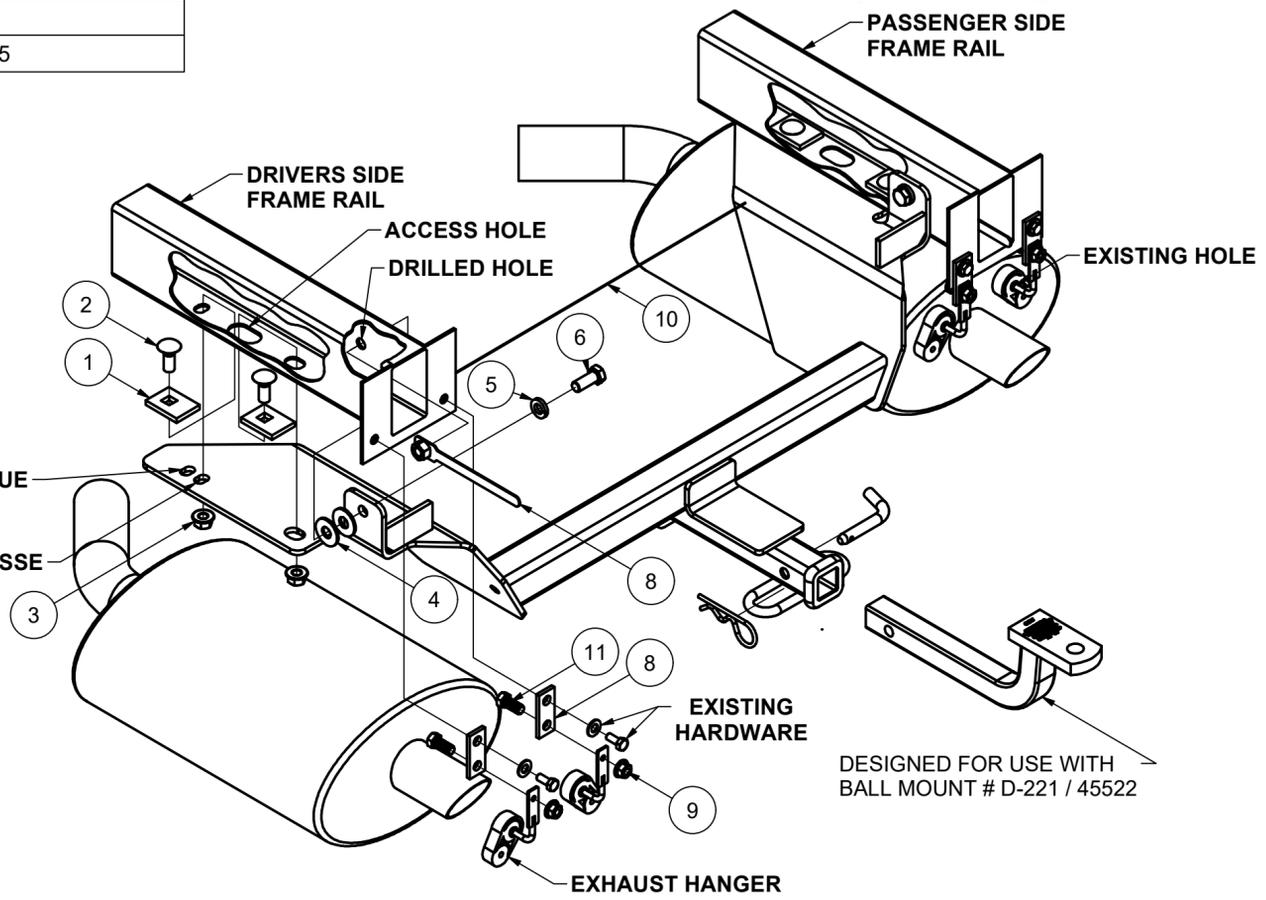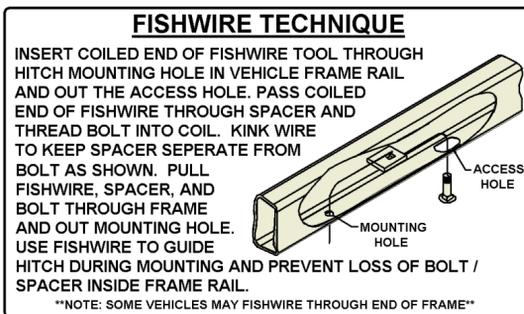

USE THIS HOLE ON CENTURY & INTRIGUE

USE THIS HOLE ON LACROSSE

HITCH WEIGHT: 35 LBS.

INSTALL TIME

PROFESSIONAL: 45 MINUTES

NOVICE (DIY): 90 MINUTES

INSTALL NOTES:

- DRILLING REQUIRED
- FISHWIRE FASTENERS
- LOWER EXHAUST
- MAY REQUIRE FASCIA TRIMMING ON BUICK LA CROSSE "SUPER"

INSTALLATION STEPS

- 1) Detach (4) rear rubber exhaust hangers from frame and lower exhaust system.
- 2) Fishwire carriage bolts and spacers through access holes in frame rails, as shown.
- 3) Raise hitch into position and secure with flange nuts, finger tighten.
- 4) Using hitch as a template, drill (2) 1/2" holes in the side of the frame rails.
- 5) Check side to side clearance between hitch and frame. Install 1/2" washers between hitch and frame as necessary to eliminate gap. Insert 1/2" hex bolt and lock washer through side of frame rail and secure with handle nut inserted through end of frame rails.
- 6) Reinstall exhaust hangers removed in step 1. (Note: For Buick LaCrosse use 7/16" hex bolts, spacers, and flange nuts to lower exhaust system as shown.)
- 7) Torque all 1/2" fasteners to 110 lb-ft and all 7/16" fasteners to 42 lb-ft.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.