

# 55308

TOYOTA CAMRY

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

01/23/09

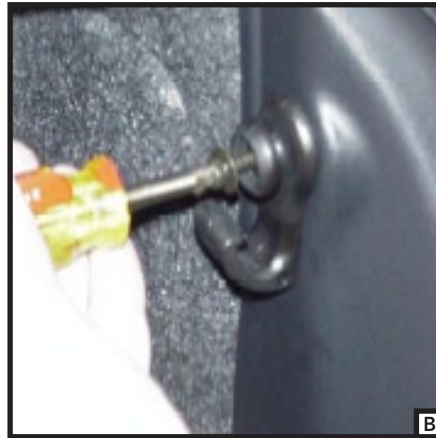


## English

1. Open the trunk of the vehicle. On the driver and passenger side remove the phillips head screws that hold the plastic trim panels in place. Remove the trim panels and pull back the trunk lining to reveal the connectors. [A](#) [B](#)
2. Starting on the driver's side, disconnect the vehicle's connectors, [C](#) being careful not to damage the locking tabs. Insert the end of the T-connector containing the yellow wire. Ensure that the connectors are fully inserted with locking tabs in place.
3. Remove rear threshold inside the trunk and route the wire to the passenger side of the vehicle. Repeat step 2 using the T-connector containing the Green wire.
4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.
5. Adhere the black converter box to the frame of the car using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided.
6. Re-assemble trim panels placing the green wire under the vehicle threshold.
7. Route the 4-flat wire to the center of the vehicle and out the trunk when in use. When not in use roll up and store in an out of the way location in the trunk.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface to avoid damage to vehicle and/or personal injury.

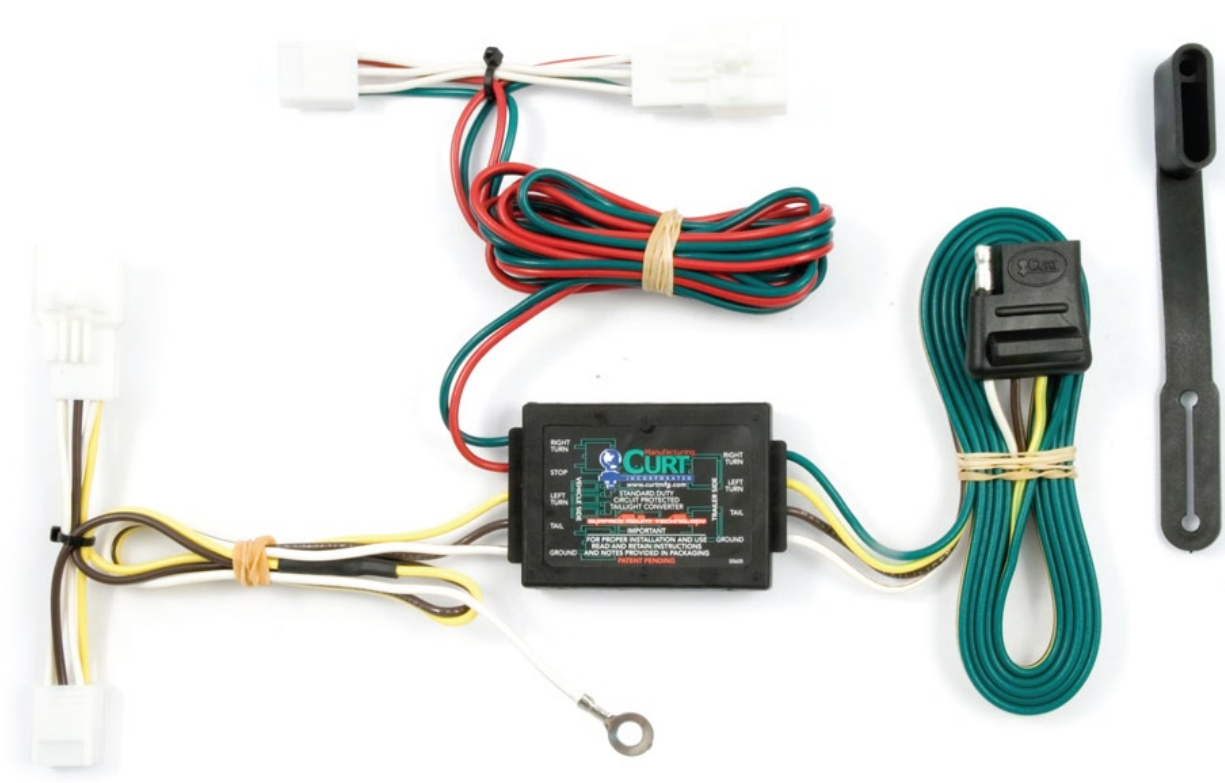

55308