

# 55319

CADILLAC ESCALADE  
CHEVROLET BLAZER  
CHEVROLET SUBURBAN  
CHEVROLET TAHOE  
GMC SUBURBAN  
GMC YUKON

WIRING LOCATION GUIDE  
GUÍA DE UBICACIÓN DEL CABLEADO  
IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

03/30/09



## English

1. Locate the vehicles factory tow harness. **[A]**  
It is located under the vehicle in location S6 along to drivers side frame rail. **[B]** It will have connectors similar to those on the T-connector.


2. Disconnect the connectors making sure not to damage the locking tabs. Insert the T-connector end in-between the disconnected connectors making sure the locking tabs are locked into place. **[C]**

3. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

4. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

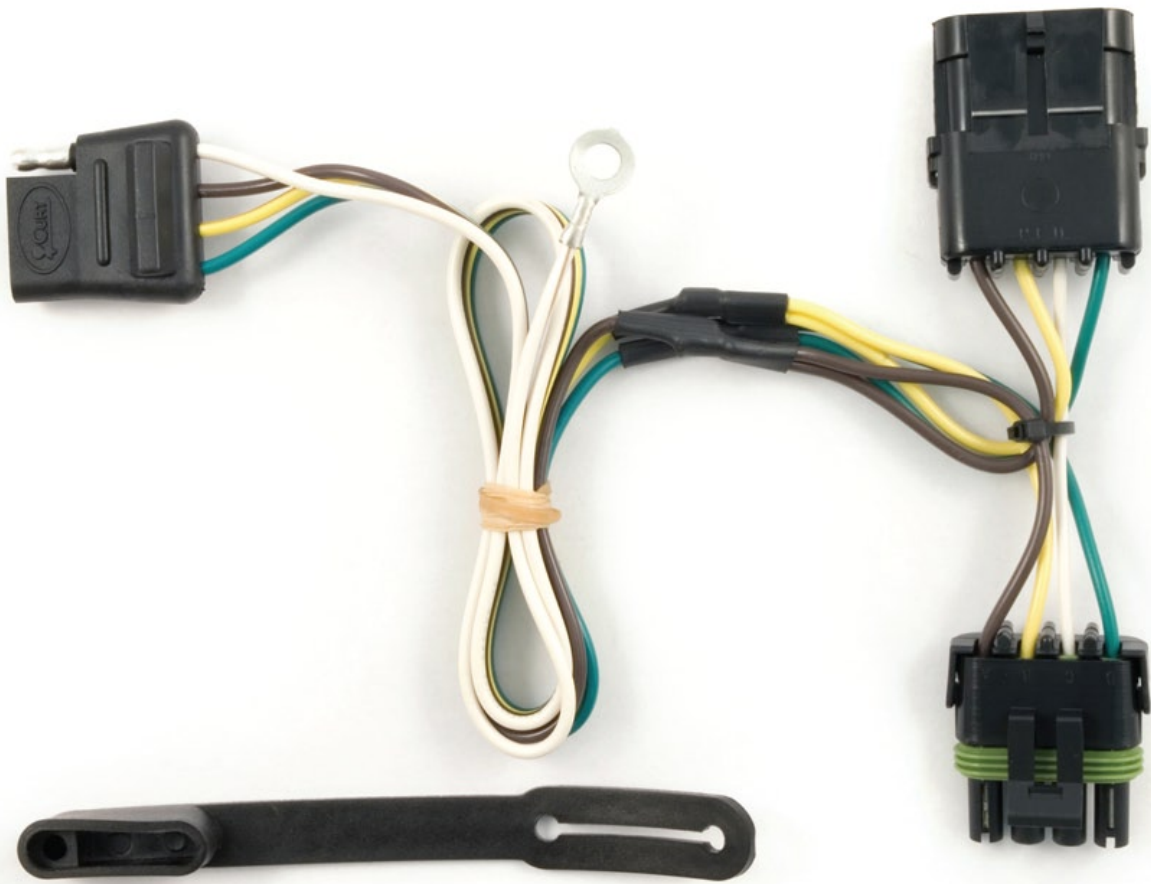

55319