

INSTALLATION INSTRUCTIONS

⚠ WARNING: DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE LAMP LOAD RATING, WHICHEVER IS LOWER

APPLICATIONS

Make	Model
Ford	Crown Victoria
Ford	Mustang (excl. Cobra SVT 99 - 04)
Mercury	Grand Marquis

WIRING LOCATION GUIDE


PASSENGER CARS (P)

Representative vehicle shown below

P3 - Behind driver side taillight housing, inside of trunk

P4 - Behind passenger side taillight housing, inside of trunk

CUSTOM WIRING HARNESS

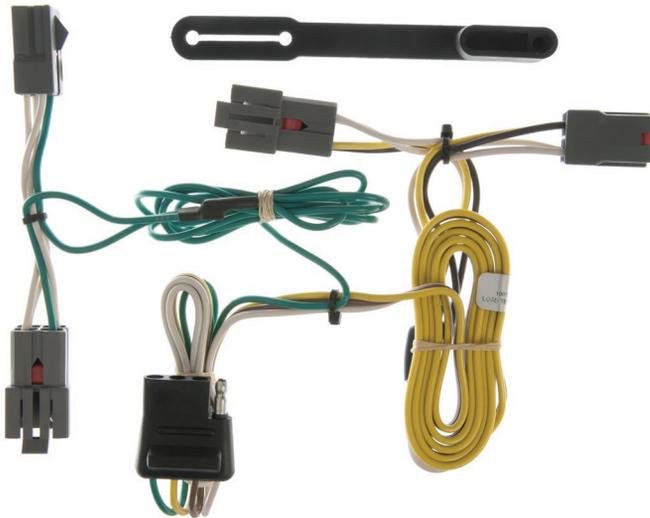

NOTICE

All steps must be followed to ensure the wiring harness will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

TOOLS NEEDED

Panel trim removal tool

⚠ WARNING

Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

INSTALLATION / SAFETY INSTRUCTIONS

Step 1

Open the vehicle trunk. Remove the scuff panel by pulling out on the bottom and then up. Take care not to damage the alignment tabs on the back (A).

Step 2

Remove the plastic wing nuts securing the felt trunk liner (B).

Step 3

Pull back on the felt liner to locate the vehicle taillight wiring harness connectors. The connectors will be similar to those on the custom wiring harness. Separate the connectors from the taillight housing taking care not to damage the locking tabs (C).

Step 4

Insert the custom wiring harness end with yellow wire between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place (D).

 **WARNING:** Check for miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and / or personal injury.

Step 5

Route the custom wiring harness end with the green wire to the passenger side behind the removed scuff panel. Repeat steps 3-4 on the passenger side using the harness end with the green wire.

Step 6

When in use, route the 4-flat to the center of the vehicle and out of the trunk. When not in use, roll up and store in a convenient, out of the way location inside the trunk. Secure any loose wires with the provided cable ties.

Step 7

Reinstall all items removed during install. Install the provided 4-flat dust cover to help prevent corrosion.

