



The **FIRST** Name
in Towing Products®

Scan for helpful
installation tips



INSTALLATION INSTRUCTIONS

DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE'S LAMP LOAD RATING, WHICHEVER IS LOWER

55384 USCAR ADD-ON



WIRING LOCATION GUIDE

PICKUP TRUCKS (T)

Representative vehicle shown below

T3 - Behind driver's side rear bumper

T4 - Behind center of rear bumper fascia



APPLICATIONS

Make	Model
Buick	Enclave
Buick	Rainier
Cadillac	Escalade
Cadillac	Escalade ESV
Cadillac	Escalade EXT
Cadillac	Escalade Hybrid
Chevrolet	Avalanche
Chevrolet	Colorado
Chevrolet	Express
Chevrolet	Silverado
Chevrolet	Silverado Hybrid
Chevrolet	Suburban
Chevrolet	Tahoe
Chevrolet	Tahoe Hybrid
Chevrolet	Trailblazer
Chevrolet	Traverse
Chrysler	Aspen
Dodge	1500 RAM
Dodge	2500 RAM
Dodge	3500 RAM
GMC	Acadia

Make	Model
GMC	Canyon
GMC	Envoy
GMC	Sierra
GMC	Sierra
GMC	Sierra
GMC	Yukon
GMC	Yukon Denali
GMC	Yukon XL
GMC	Yukon XL Denali
Hummer	H2
Hummer	H3
Hummer	H3T
Infiniti	QX56
Isuzu	Ascender
Kia	Borrego
Nissan	Pathfinder Armada
Nissan	Titan
Oldsmobile	Bravada
Saab	9-7X
Saturn	Outlook

SUVS, MINI & FULL-SIZED VANS (S)

Representative vehicle shown below


S3 - Behind driver's side rear access panel

S4 - Behind passenger's side rear access panel

S5 - Behind driver's side rear bumper

S6 - Behind center of rear bumper

S7 - Behind passenger's side rear bumper

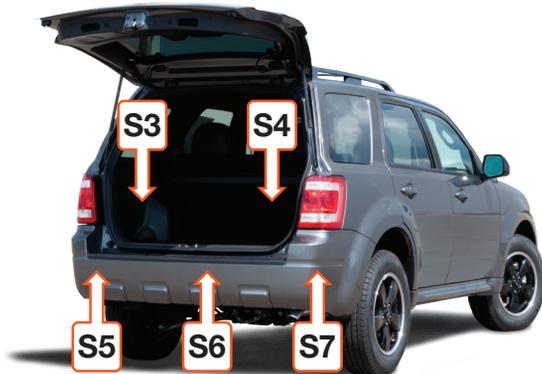

NOTE

All steps must be followed to ensure the T-connector will function properly. Once installed, test the function by connecting a test light or properly wired trailer.

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

INSTALLATION

For vehicles without a Factory 7-way:

Step 1

Access the vehicle's wiring harness connectors behind the driver's side rear bumper in position T3 as shown in the 'Wiring Location Guide'.

Step 2

Locate the vehicle battery. Look up the battery location in the owner's manual of your vehicle. Disconnect the negative battery terminal. Be sure to fasten this wire down and away from the battery when completing the installation process.

Step 3

Remove and save the protective cap from the housing. Check the mating surface of the housing to make sure it is free of rust and dirt. Clean if necessary.

Step 4

Insert the T-connector housing into the vehicle's housing (A). Make sure the connectors are fully inserted with locking tabs in place.

Step 5

Place protective cap from Step 3 on the remaining plug end.

Step 6

Reconnect negative battery terminal.

For vehicles with a Factory 7-way:

Step 1

Locate the factory 7-way attached to the hitch, behind the center of the rear bumper in position T4 as shown in the 'Wiring Location Guide'.

Step 2

Locate the vehicle battery. Look up the battery location in the owner's manual of your vehicle. Disconnect the negative battery terminal. Be sure to fasten this wire down and away from the battery when completing the installation process.

Step 3

Separate the factory socket and the 7-way (B).

Step 4

Insert the T-connector between the factory housing and the 7-way housing (C). Make sure the connectors are fully inserted with locking tabs in place (D).

Step 5

Reconnect negative battery terminal.

