

# INSTALLATION INSTRUCTIONS

**⚠ WARNING: DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE LAMP LOAD RATING, WHICHEVER IS LOWER**

## APPLICATIONS

Make	Model
Chevrolet	Equinox
Pontiac	Torrent



## WIRING LOCATION GUIDE

### SUVs, MINI & FULL-SIZED VANS (S)

Representative vehicle shown below

**S3** - Behind driver side rear access panel

## CUSTOM WIRING CONNECTOR

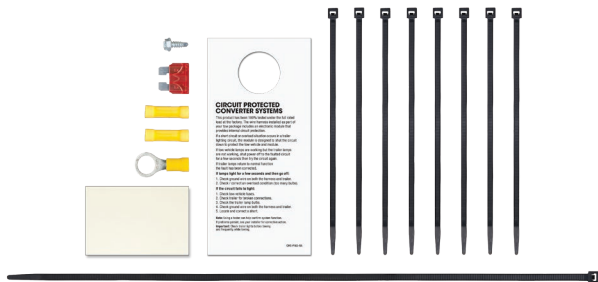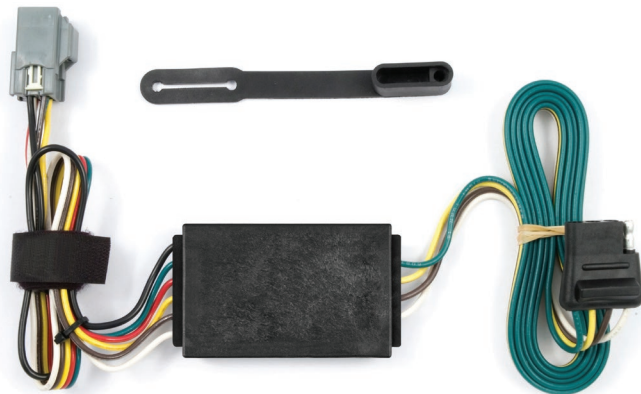

## NOTICE

All steps must be followed to ensure the wiring connector will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

## TOOLS NEEDED

None

## ⚠ WARNING

The battery connection must be fuse-protected, 10-amp max. Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

Signal Circuits - 3.0 amps per side

Tail / Running Circuits - 6.0 amps total

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

# INSTALLATION / SAFETY INSTRUCTIONS

## Step 1


Open the vehicle tailgate and locate the jack storage compartment on the driver side (A). Remove the compartment cover panel and tire jack to access harness area (B).

## Step 2

Inside the driver side jack compartment locate the vehicle taillight wiring harness (C). The 6-pin connector, will be taped to the vehicle wiring harness. This is located at the floor of the vehicle jack compartment (D). The connector will be similar to the one on the custom wiring connector. Remove the tape on the vehicle connector and insert the custom wiring connector into the vehicle connector. Make sure the connector is fully inserted with the locking tabs in place.

## Step 3

Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle frame or drill a 3/32" pilot hole for the provided screw. The area should be free of rust, dirt and paint. Secure the white ground wire using the ring terminal and provided screw.

 **WARNING:** Check for miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and / or personal injury.

## Step 4

Locate a flat spot inside the vehicle, near the taillight. Adhere the black converter box using the provided double-sided tape.

## Step 5

When in use, route the 4-flat to the center of the vehicle and out of the trunk. When not in use, roll up and store in a convenient, out of the way location inside the trunk. Secure any loose wires with the provided cable ties.

## Step 6

Reinstall all items removed during install. Install the provided 4-flat dust cover to help prevent corrosion.

