

# 56030

SCION XB

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

10/23/08

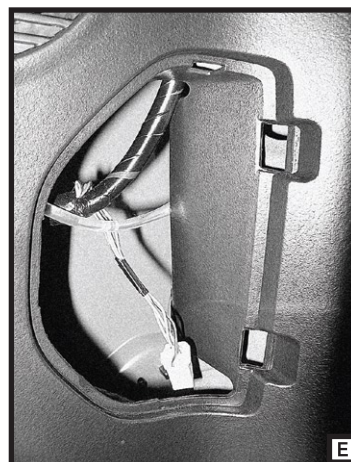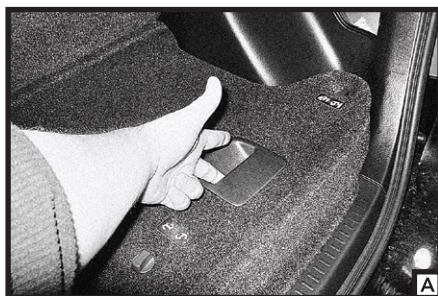

## English

1. Open rear hatch. Temporarily remove the rear threshold plate, storage covers and floor covering. **[A] [B] [C]**
2. Partially remove the rear interior trim panels on both the driver and passenger side of the vehicle. Several trim panel fasteners will need to be removed to remove the panels. **[D]**
3. On the driver and passenger sides of the vehicle, locate the vehicle's taillight wiring harness. The taillight wiring harnesses will have a connection point, matching the ends of the T-Connector. Separate this connector, being careful not to break the locking tabs. All connector surfaces should be clean and free of dirt. **[E]**
4. Starting on the passenger side, insert the T-Connector end with the green wire between the vehicle wiring connectors and lock into place. Be careful not to damage the locking tabs and be sure that connectors are fully inserted with locking tabs in place.
5. Route the T-Connector end with the yellow wire to the driver's side behind the panels and along the threshold. Repeat Step 4 using T-Connector containing the yellow wire.
6. Locate a suitable grounding point near the connector. Drill a 3/32" hole and secure white wire with eyelet using screw provided or on the passenger side, locate an existing ground stud. Loosen bolt, place screw eyelet on stud and re-tighten bolt.
7. On passenger side, mount the T-Connector black converter box in a out of the way place with the double-sided tape provided and secure all loose wires with cable ties. Secure the remainder of the T-connector harness with the cable ties provided, to prevent damage or rattling and being careful to avoid any areas that would cut or pinch the wire.
8. Reinstall the plastic trim panels, threshold, storage covers, floor covering and other items removed during installation, being careful not to pinch or cut the wires.

### Warning!

Verify that miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/ or personal injury.

## Español

## Français



56030