


# 56041

HYUNDAI GENESIS

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS

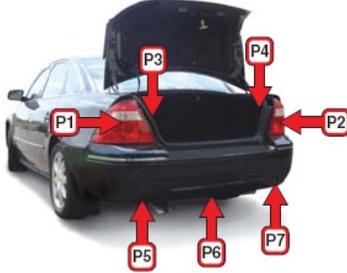

### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.




### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

11/4/08

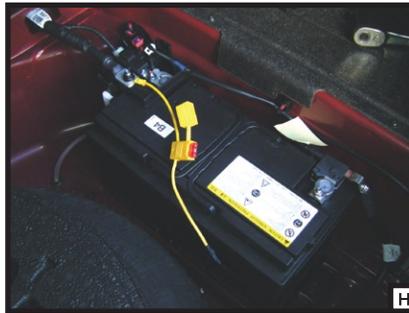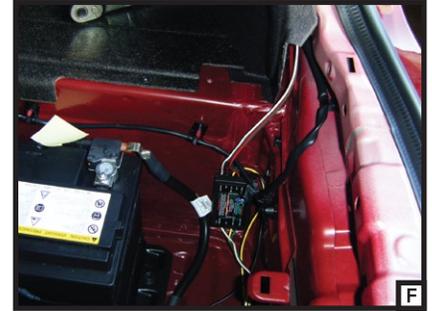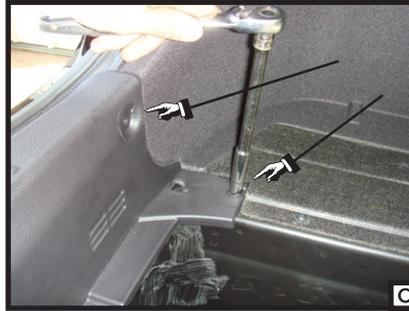

## English

1. Open trunk, lift up storage cover for spare tire and remove battery ground wire located on passenger side of trunk. [A]
2. Remove the one screw and one plastic fastener retaining the side trim panels on each side of the vehicle. [B]
3. Remove the one plastic fastener and one bolt using a 10mm socket for each side of the vehicle. Once complete remove rear trunk fascia. [C]
4. Pull back side panel on passenger side of vehicle. [D] Unplug vehicle harness from behind taillight making sure not to break tabs. Insert T-connector with the green wire between harness making sure housings are fully inserted and locked into place. [E]
5. Locate a suitable grounding point near the harness such as an existing metal screw with nut. If no such feature exists, drill a 3/32" hole and secure white wire using eyelet and screw provided.

## Español

## Français

## English

- Secure the black converter box near the battery on inside of tire storage compartment using double-sided tape provided. **[F]**
- Route the housings with the yellow wire to the drivers side of the vehicle and repeat step 4. **[G]**
- Route the 12 gauge yellow wire with ring terminal to the battery and secure the positive post. Insert 10 amp fuse in fuse holder and reconnect negative battery wire. **[H]**
- Finish by returning all parts removed from vehicle to their original positions. Test the installation with a test light or trailer to verify proper function. Leave 4-flat in tire storage area, route to center of vehicle when using.

**WARNING!**  
Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to avoid damage to vehicle and/or personal injury.

## Español

## Français



56041