




OMIX-ADA, Inc.

Part #11231.28
11231.18

460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com

Fog Light Guard

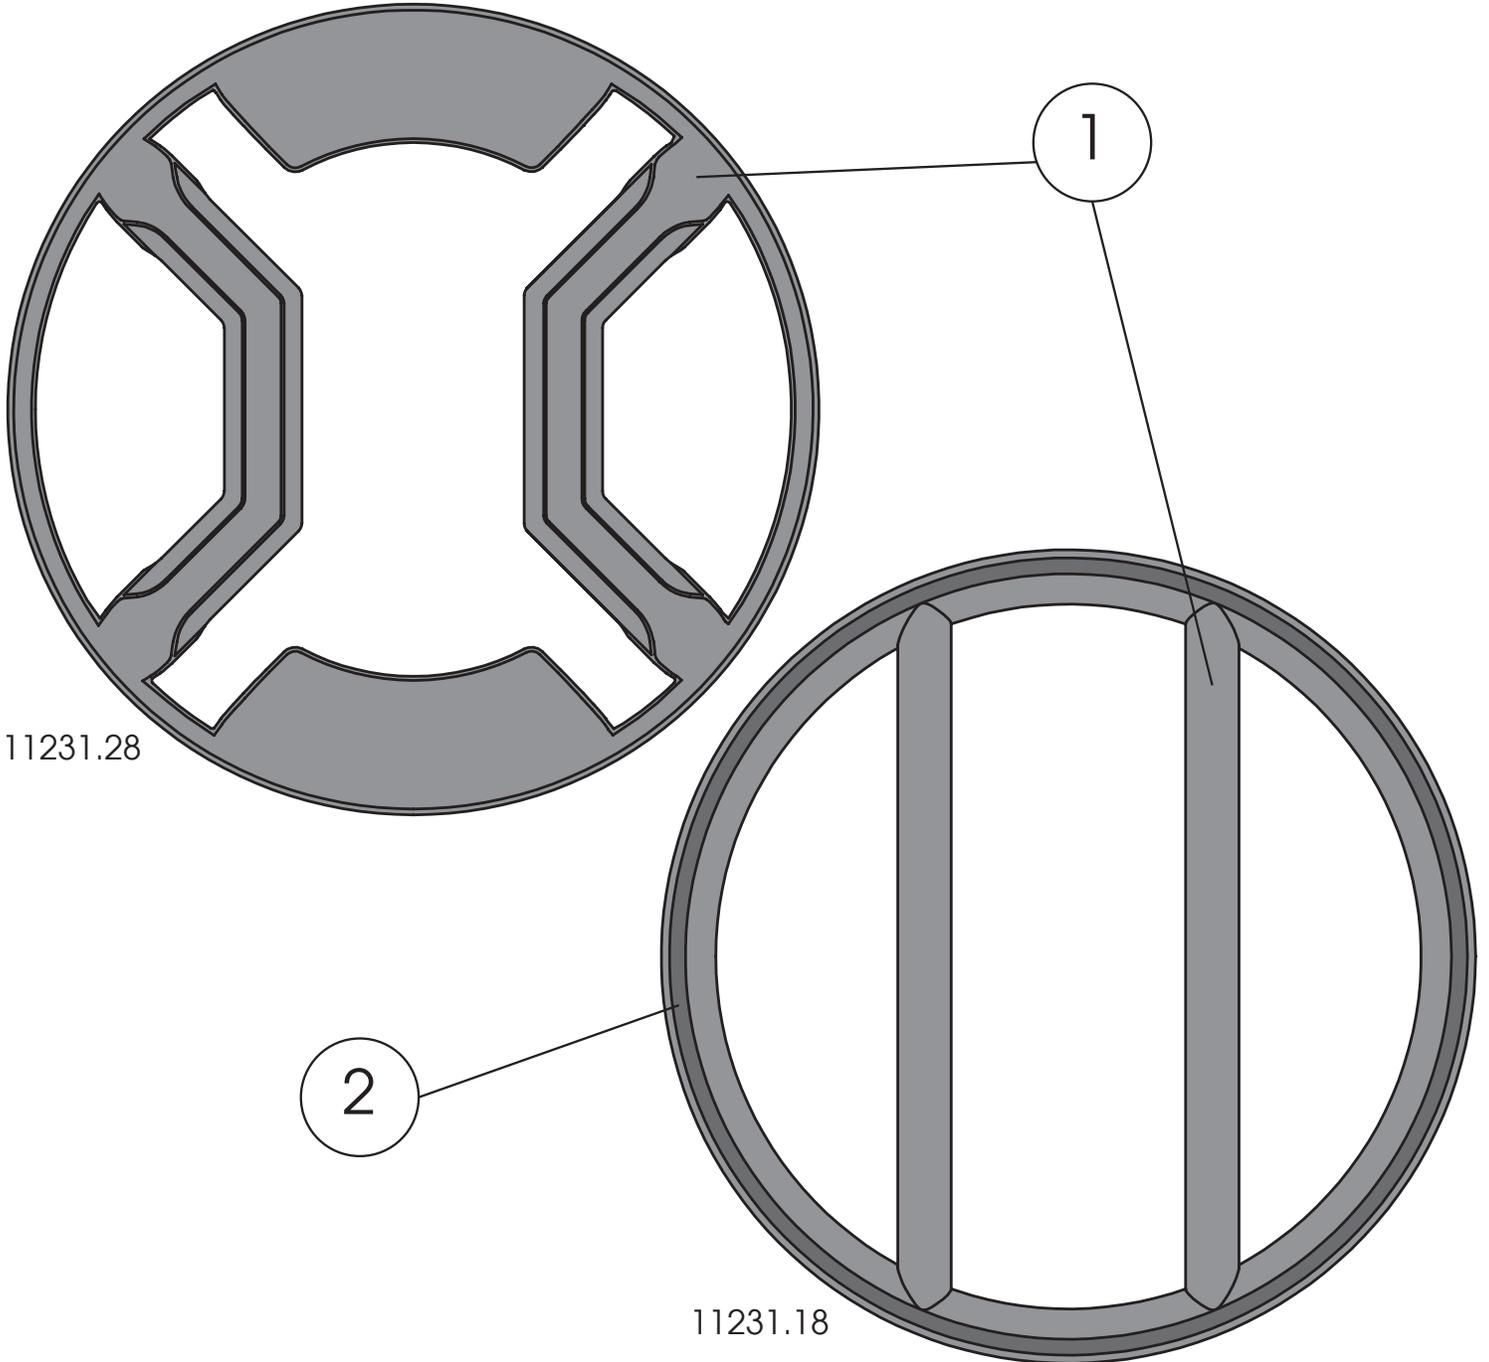

Components

- 1. Fog Light Guard
- (2) 2. O-Ring (11231.18 only)
- (2)

OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649 | EMAIL: techsupport@omix-ada.com

FOR WARRANTY INFORMATION VISIT: www.Omix-Ada.com




OMIX-ADA, Inc.

460 HORIZON DR. SUITE 100 | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 770-614-6069 | info@omix-ada.com


Fog Light Guard

1. From underneath vehicle, locate 4 Phillips Head Screws connecting fog lights to bumper. Remove screws and lights and set aside for later use.

NOTICE Removing plastic air dam may provide easier access.

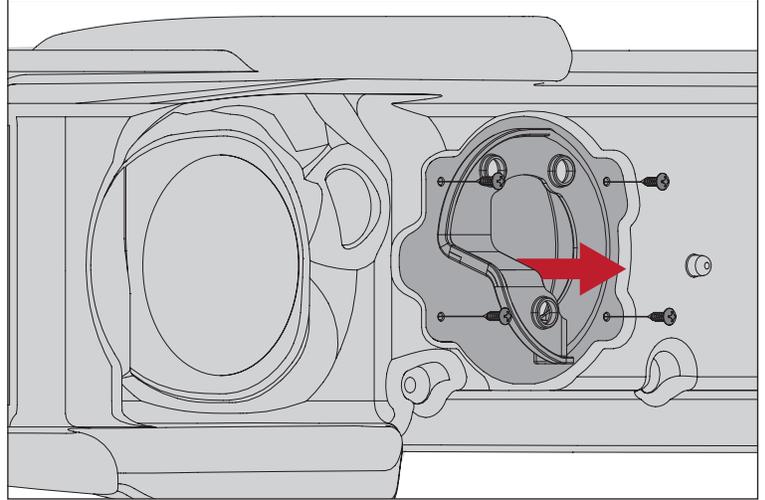

2. If using O-Ring, place around outside of Guard.

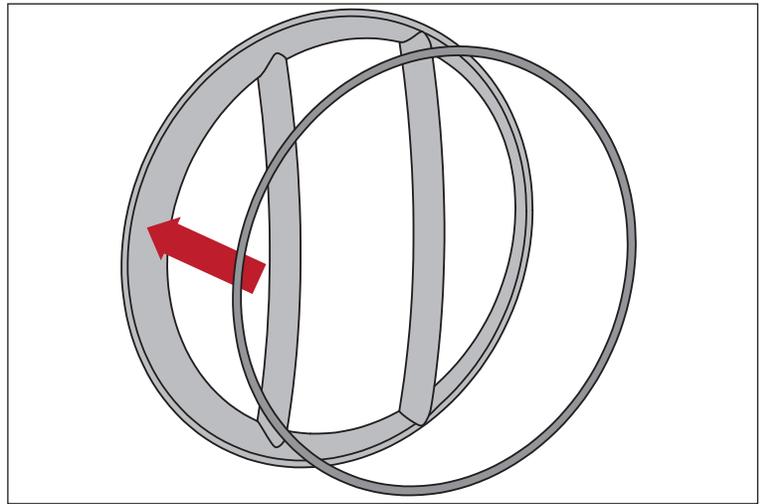

3. Insert Fog Light Guard into fog light opening. If applicable, O-Rings should contact bumper.

4. Reinstall fog light guards and tighten screws.

