

13076

FORD TRANSIT CONNECT


7/29/2020

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 3,500 LBS. TRAILER WEIGHT & 350 LBS. TONGUE WEIGHT.
GROSS LOAD CAPACITY WHEN USED AS A WEIGHT DISTRIBUTION HITCH: 4,000 LBS. TRAILER WEIGHT & 400 LBS. TONGUE WEIGHT

*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 877-287-8634

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	4	10-10386	HHCS,M12x1.75,40,CL10.9,YZ
2	4	30-00149	WASHER,S-CON,1/2,YZ

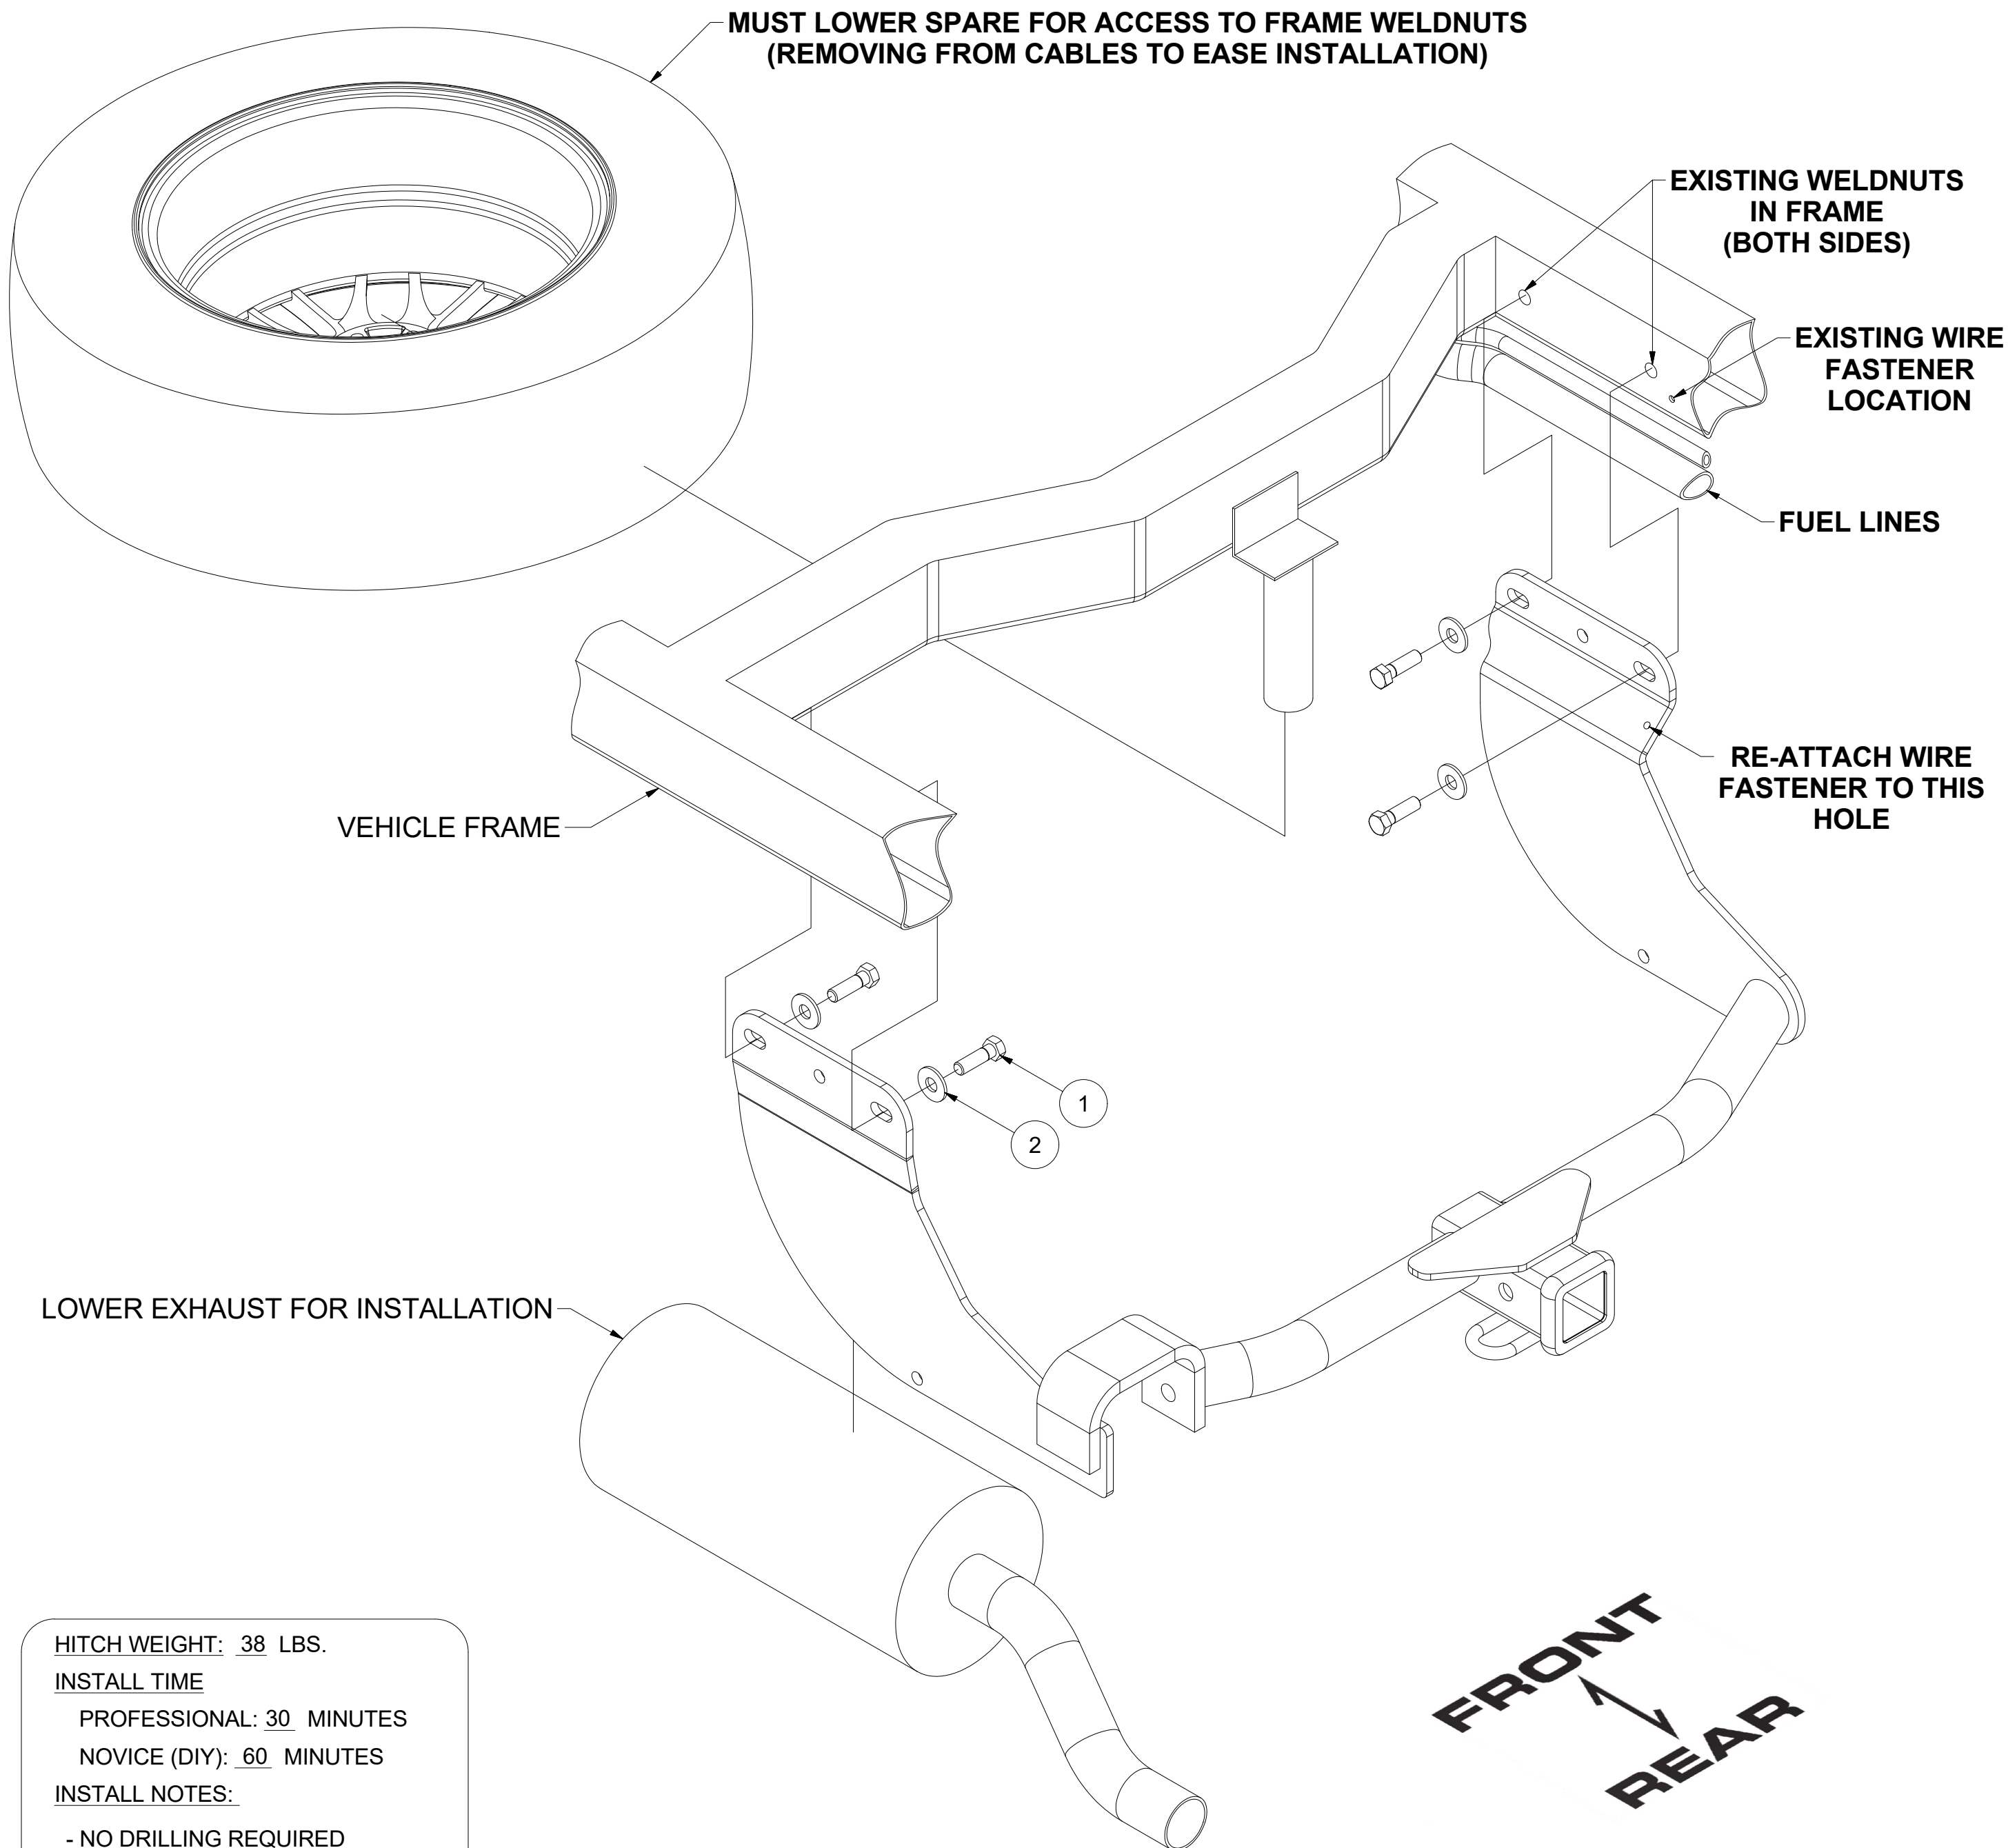

HITCH WEIGHT: 38 LBS.

INSTALL TIME

PROFESSIONAL: 30 MINUTES

NOVICE (DIY): 60 MINUTES

INSTALL NOTES:


- NO DRILLING REQUIRED
- LOWER EXHAUST
- LOWER SPARE TIRE
- DO NOT LIFT VEHICLE BY FRAME

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.


Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 877-287-8634

TOOLS REQUIRED
SOCKET WRENCH
TORQUE WRENCH
19mm SOCKET
SCREW DRIVER

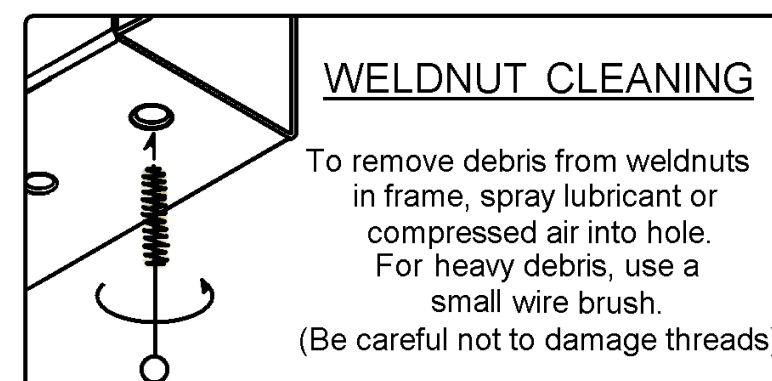

EXHAUST HANGER REMOVAL

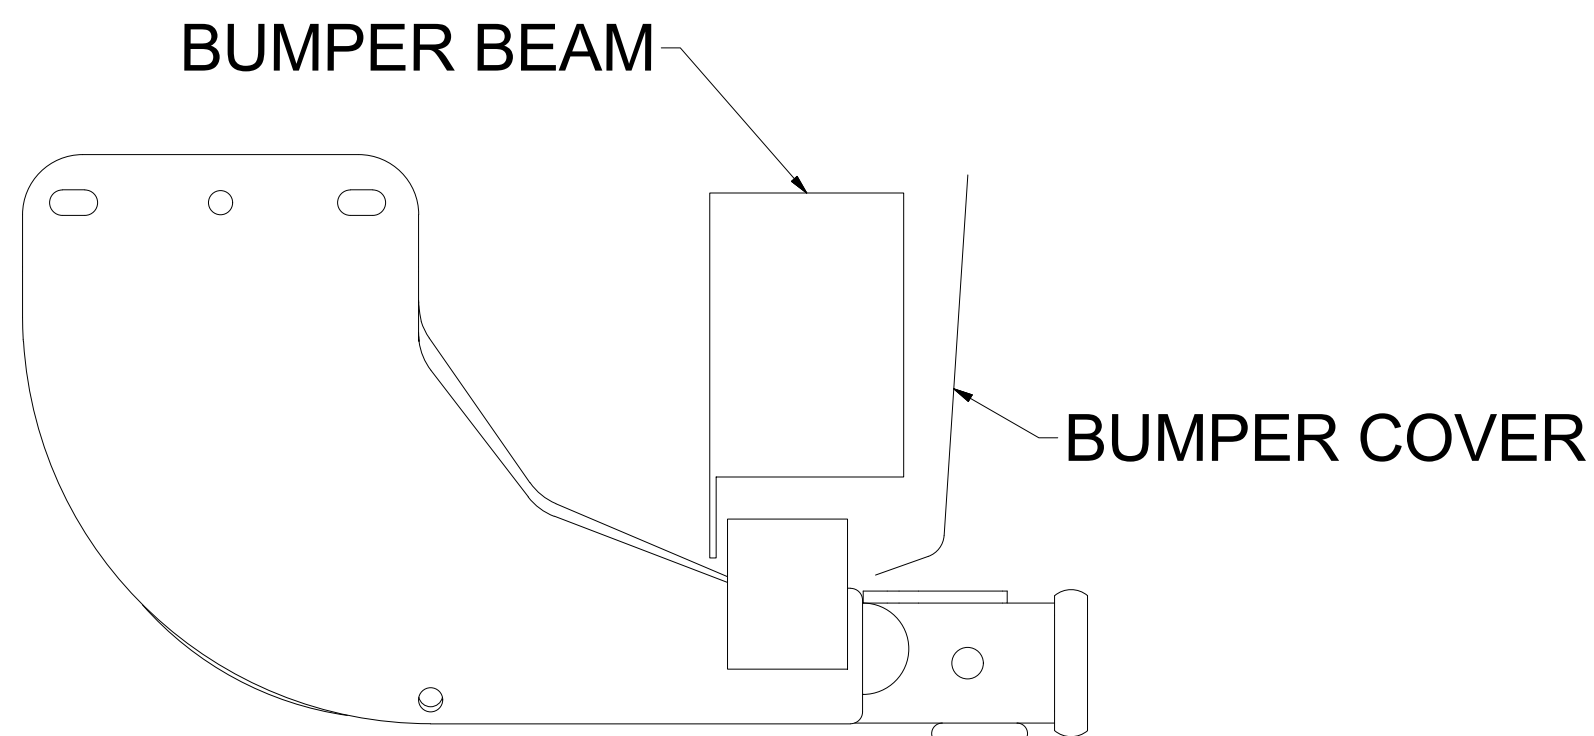

INSTALLED HITCH POSITION

NOTE: VEHICLE SUSPENSION NEEDS TO STAY IN COMPRESSION DURING INSTALLATION TO AVOID SPRING SHACKLE ROTATION WHICH WILL CAUSE INTERFERENCE WITH THE HITCH

INSTALLATION STEPS

- 1) Lower rearmost exhaust hanger by twisting the hanger 90° in the frame and lower through the slot in the frame. (See exhaust hanger removal image)
- 2) Lower the spare tire, to ease installation remove spare tire from vehicle. (Spare tire will be re-installed in step 7)

(Note: Refer to vehicle manual for spare tire removal)

- 3) Using a screw driver, on the passenger side, pry the wire fastener from the frame rail.

Caution: before and while raising hitch into position, be sure not to pinch any wires or fuel lines between the hitch and the frame rails.

- 4) To raise hitch into position, raise the passenger side mounting plate up to the inside of the frame while sliding the hitch over the exhaust. Then raise the driver side mounting plate to the inside of the frame.
- 5) Loosely secure hitch with M12-1.75 hex bolts and 1/2" conical toothed washers through existing weldnuts in side of frame rails. Attach the wire fastener (removed in step 3) to passenger side mounting plate where shown.
- 6) Torque all 12mm fasteners to 79 lb-ft.
- 7) Re-install exhaust hanger (reverse of removal) and re-install spare tire (spare tire may touch hitch when fully raised).

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.