Please visit www.blueox.com for the latest version of these installation instructions.



## **BX1748**

# 2021-2023 Cadillac Escalade (No Diesel) (Includes ACC, Shutter, Night Vision, & Super Cruise) Installation Instructions

Attachment Tab Height: 15"

Attachment Tab Width: 18"

Se	rial	Nu	mb	er
----	------	----	----	----

Please read BOTH these Installation Instructions and the General Information sheet prior to installing or operating this equipment.

- Blue Ox® towing products and accessories are intended to be installed by Blue Ox® Dealers who are familiar with our products and have the equipment and knowledge necessary to do "fit work". If needed, Blue Ox® Dealers can be found at www.blueox.com or by contacting our Technical Service Department at (402) 385-3051.
- 2. Many Blue Ox® baseplates are designed to use existing holes and hardware to mount the baseplate to the towed vehicle. Even though bolts are there, do not assume they are adequate for baseplate mounting. Always use the hardware supplied in the hardware kit and existing hardware as specified in the installation instructions.

	AP ATT
0	
The same of	

If the front of your vehicle looks different than this, please contact us at (402)385-3051.

Reference your vehicle owner's manual for manufacturer's towing specifications.

# **Bolt Torque Specifications**Torque in Foot-Pounds for Inch Bolts

<b>Bolt Size</b>	Grade 5	Grade 8	
1/4"	10	14	
5/16"	19	29	
3/8"	33	47	
7/16"	54	78	
1/2"	78	119	
5/8"	154 230		
3/4"	257	257 380	

# **Bolt Torque Specifications**

Torque in Foot-Pounds for Metric Bolts

<b>Bolt Size</b>	Grade 8.8	Grade 10.9	
6MM	6	8	
8MM	16	22	
10MM	31	40	
12MM	54	70	
14MM	89	117	
16MM	161	230	
18MM	222	318	

# **WARNING**

Failure to read and follow these instructions could result in separation of the towed vehicle from the tow bar, causing property damage, loss of towed vehicle, personal injury or death.

## 2021-2022 Cadillac Escalade (No Diesel)

# (Includes Adaptive Cruise Control, Shutters, Night Vision, & Super Cruise) Installation Instructions

**Instruction Notes:** The fascia, fascia cover, belly pan, mounting bracket, and ACC bracket are removed and reinstalled for the baseplate installation. Some drilling and trimming is required.

Place all components that are removed on a flat, sturdy surface. All items will be reinstalled unless otherwise noted after the baseplate is installed.

The dimensional variations between otherwise identical vehicles can be considerable. While the baseplate was designed for easy installation, it may be necessary to tailor the baseplate slightly to compensate for vehicle manufacturer's tolerances.

The BX8848 Tail Light Wiring Kit is recommended for this vehicle.

#### **Tail Light Remove Instructions:**



Remove the lower plastic cover.



Using a T15 Torx, remove the one (1) bolt at the top of upper plastic cover. Remove upper cover.



3. Using a T15 Torx, remove the three (3) bolts attaching the tail light to the vehicle.

## **NOTICE**

- Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.
- When using power drills be aware of the dangers of torque and drill bit length.
- When using a reciprocating saw be aware of objects behind the cutting surface.
- Use a good quality paint to spray cut edges of frame to prevent rusting.
- Be sure that **ALL** electrical connections are plugged in and accessories are functioning properly before reinstalling the fascia.
- The baseplate is computer tested to your vehicle's GVWR, exceeding this weight will void the manufacturer's warranty.
- Be sure to use a sufficient amount of Loctite® Red on all bolt threads before tightening. Tighten all bolts according to the torque chart provided unless specified.
- Dealer or installer be certain the user receives these instruction sheets.
- If the baseplate is in an accident, it must be replaced. **DO NOT** use it again! An accident can cause unseen damage and using it again could result in more damage or serious injury. **DO NOT** use the baseplate if it is damaged or missing parts.

# 2021-2022 Cadillac Escalade (No Diesel)

(Includes Adaptive Cruise Control, Shutters, Night Vision, & Super Cruise)
Installation Instructions

Large Vise Crip   TMM Socket   10MM Socket   10MM Socket   10MM Socket   10MM Socket   1716; Socketh   1716;				Tools Required	
The convector			2	Utility Knife Torque Wrench Drill Loctite® RED	10MM Socket 7/16" Socket 7/16" Wrench 3/4" Socket
Item No.         Part No.         Description         Qty.           1         61-4029         1/2"-13 Whiz Nut, w/ 10" Wire         8           2         61-8480         BX1745 Baseplate         1           3         62-3468         Attachment Tab Assembly with Hole         2           4         101-10408         Electrical Bracket w/ Breakaway Switch Mount, Short         1           5         201-0050         1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP         1           6         201-0051         1/2"-13 x 1-1/2" Hex Head Bolt, Grade 5         8           7         201-0192         #10-32 1/2" Round Slotted Head Screw         2           8         201-0979         #12-14 x 1" Self Drilling Screw, ZP         2           9         202-0047         #10-32 Hex Nut         2           10         202-0102         1/4"-20 Hex Nylon Nut, ZP         1           11         203-0012         1/2" Lock Washer, ZP         8           12         203-0054         #10 Lock Washer, ZP         2           13         226-0049(not shown)         Class IV Safety Cables         2           14         229-0512(not shown)         1/2" Quicklink, ZP         2	4 PIN CONNEC	3 4 12	10 5	6	
Item No.         Part No.         Description         Qty.           1         61-4029         1/2"-13 Whiz Nut, w/ 10" Wire         8           2         61-8480         BX1745 Baseplate         1           3         62-3468         Attachment Tab Assembly with Hole         2           4         101-10408         Electrical Bracket w/ Breakaway Switch Mount, Short         1           5         201-0050         1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP         1           6         201-0051         1/2"-13 x 1-1/2" Hex Head Bolt, Grade 5         8           7         201-0192         #10-32 1/2" Round Slotted Head Screw         2           8         201-0979         #12-14 x 1" Self Drilling Screw, ZP         2           9         202-0047         #10-32 Hex Nut         2           10         202-0102         1/4"-20 Hex Nylon Nut, ZP         1           11         203-0012         1/2" Lock Washer, ZP         8           12         203-0054         #10 Lock Washer, ZP         2           13         226-0049(not shown)         Class IV Safety Cables         2           14         229-0512(not shown)         1/2" Quicklink, ZP         2		4 PIN CONNECTOR	U RREAKAWAY SWIT⊂I	ы	
1       61-4029       1/2"-13 Whiz Nut, w/ 10" Wire       8         2       61-8480       BX1745 Baseplate       1         3       62-3468       Attachment Tab Assembly with Hole       2         4       101-10408       Electrical Bracket w/ Breakaway Switch Mount, Short       1         5       201-0050       1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP       1         6       201-0051       1/2"-13 x 1-1/2" Hex Head Bolt, Grade 5       8         7       201-0192       #10-32 1/2" Round Slotted Head Screw       2         8       201-0979       #12-14 x 1" Self Drilling Screw, ZP       2         9       202-0047       #10-32 Hex Nut       2         10       202-0102       1/4"-20 Hex Nylon Nut, ZP       1         11       203-0012       1/2" Lock Washer, ZP       8         12       203-0054       #10 Lock Washer, ZP       2         13       226-0049(not shown)       Class IV Safety Cables       2         14       229-0512(not shown)       1/2" Quicklink, ZP       2	Item No			! <b>!</b>	Otv
2       61-8480       BX1745 Baseplate       1         3       62-3468       Attachment Tab Assembly with Hole       2         4       101-10408       Electrical Bracket w/ Breakaway Switch Mount, Short       1         5       201-0050       1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP       1         6       201-0051       1/2"-13 x 1-1/2" Hex Head Bolt, Grade 5       8         7       201-0192       #10-32 1/2" Round Slotted Head Screw       2         8       201-0979       #12-14 x 1" Self Drilling Screw, ZP       2         9       202-0047       #10-32 Hex Nut       2         10       202-0102       1/4"-20 Hex Nylon Nut, ZP       1         11       203-0012       1/2" Lock Washer, ZP       8         12       203-0054       #10 Lock Washer, ZP       2         13       226-0049(not shown)       Class IV Safety Cables       2         14       229-0512(not shown)       1/2" Quicklink, ZP       2				w/ 10" Wire	
3. 62-3468 Attachment Tab Assembly with Hole					
4.       101-10408       Electrical Bracket w/ Breakaway Switch Mount, Short       1         5.       201-0050       1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP       1         6.       201-0051       1/2"-13 x 1-1/2" Hex Head Bolt, Grade 5       8         7.       201-0192       #10-32 1/2" Round Slotted Head Screw       2         8.       201-0979       #12-14 x 1" Self Drilling Screw, ZP       2         9.       202-0047       #10-32 Hex Nut       2         10.       202-0102       1/4"-20 Hex Nylon Nut, ZP       1         11       203-0012       1/2" Lock Washer, ZP       8         12       203-0054       #10 Lock Washer, ZP       2         13       226-0049(not shown)       Class IV Safety Cables       2         14       229-0512(not shown)       1/2" Quicklink, ZP       2					
5.       201-0050       1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP       1         6.       201-0051       1/2"-13 x 1-1/2" Hex Head Bolt, Grade 5       8         7.       201-0192       #10-32 1/2" Round Slotted Head Screw       2         8.       201-0979       #12-14 x 1" Self Drilling Screw, ZP       2         9.       202-0047       #10-32 Hex Nut       2         10.       202-0102       1/4"-20 Hex Nylon Nut, ZP       1         11       203-0012       1/2" Lock Washer, ZP       8         12       203-0054       #10 Lock Washer, ZP       2         13       226-0049(not shown)       Class IV Safety Cables       2         14       229-0512(not shown)       1/2" Quicklink, ZP       2	•				
6.       201-0051       1/2"-13 x 1-1/2" Hex Head Bolt, Grade 5       8         7.       201-0192       #10-32 1/2" Round Slotted Head Screw       2         8.       201-0979       #12-14 x 1" Self Drilling Screw, ZP       2         9.       202-0047       #10-32 Hex Nut       2         10.       202-0102       1/4"-20 Hex Nylon Nut, ZP       1         11       203-0012       1/2" Lock Washer, ZP       8         12       203-0054       #10 Lock Washer, ZP       2         13       226-0049(not shown)       Class IV Safety Cables       2         14       229-0512(not shown)       1/2" Quicklink, ZP       2					
7.       201-0192       #10-32 1/2" Round Slotted Head Screw       2         8.       201-0979       #12-14 x 1" Self Drilling Screw, ZP       2         9.       202-0047       #10-32 Hex Nut       2         10.       202-0102       1/4"-20 Hex Nylon Nut, ZP       1         11.       203-0012       1/2" Lock Washer, ZP       8         12.       203-0054       #10 Lock Washer, ZP       2         13.       226-0049(not shown)       Class IV Safety Cables       2         14.       229-0512(not shown)       1/2" Quicklink, ZP       2	6	201-0051			
8.       201-0979       #12-14 x 1" Self Drilling Screw, ZP       2         9.       202-0047       #10-32 Hex Nut       2         10.       202-0102       1/4"-20 Hex Nylon Nut, ZP       1         11.       203-0012       1/2" Lock Washer, ZP       8         12.       203-0054       #10 Lock Washer, ZP       2         13.       226-0049(not shown)       Class IV Safety Cables       2         14.       229-0512(not shown)       1/2" Quicklink, ZP       2					
9.       202-0047       #10-32 Hex Nut       2         10.       202-0102       1/4"-20 Hex Nylon Nut, ZP       1         11.       203-0012       1/2" Lock Washer, ZP       8         12.       203-0054       #10 Lock Washer, ZP       2         13.       226-0049(not shown)       Class IV Safety Cables       2         14.       229-0512(not shown)       1/2" Quicklink, ZP       2					
10       202-0102       1/4"-20 Hex Nylon Nut, ZP       1         11       203-0012       1/2" Lock Washer, ZP       8         12       203-0054       #10 Lock Washer, ZP       2         13       226-0049(not shown)       Class IV Safety Cables       2         14       229-0512(not shown)       1/2" Quicklink, ZP       2					
11       203-0012       1/2" Lock Washer, ZP       8         12       203-0054       #10 Lock Washer, ZP       2         13       226-0049(not shown)       Class IV Safety Cables       2         14       229-0512(not shown)       1/2" Quicklink, ZP       2					
12       203-0054       #10 Lock Washer, ZP       2         13       226-0049(not shown)       Class IV Safety Cables       2         14       229-0512(not shown)       1/2" Quicklink, ZP       2					
13					
14229-0512(not shown)1/2" Quicklink, ZP					
		` ,			

#### **Important:**


Use only genuine factory replacement parts on your baseplate. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your baseplate, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 5, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty. Towing behind a non-motorized vehicle will void the warranty.

# 2021-2022 Cadillac Escalade (No Diesel)

(Includes Adaptive Cruise Control, Shutters, Night Vision, & Super Cruise)
Installation Instructions



 Remove the nine (9) push pins from the fascia cover. Remove cover and set aside to be reinstalled later.

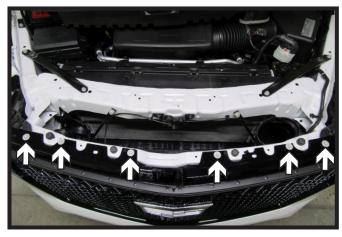

2. Using a 10MM socket, remove the six (6) bolts for the top of the fascia.



3. Using a T15 Torx, remove the five (5) bolts from the wheel well liner. Do this on both sides of the vehicle.



4. Pull back the wheel well liner. Using a 7MM socket, remove the one (1) bolt from the fascia joint. Do this on both sides of the vehicle.

# 2021-2022 Cadillac Escalade (No Diesel) (Includes Adaptive Cruise Control, Shutters, Night Vision, & Super Cruise) Installation Instructions



5. Using a 7MM socket, remove the three (3) bolts from the underside of the fascia in front of the tire. Do this on both sides of the vehicle.



6. Using a T15 Torx, remove the eight (8) bolts from the front edge of the belly pan.

## 2021-2022 Cadillac Escalade (No Diesel)

(Includes Adaptive Cruise Control, Shutters, Night Vision, & Super Cruise)
Installation Instructions







7. Using a 7MM socket, remove the twelve (12) bolts from the side and back of the skid plate.



8. Pull back the wheel well liner in front of the tire. Using a 10MM socket, remove the one (1) bolt. Do this on both sides of the vehicle.



9. Unplug the two (2) electrical connections on the passenger side of the vehicle.

2021-2022 Cadillac Escalade (No Diesel)

(Includes Adaptive Cruise Control, Shutters, Night Vision, & Super Cruise)
Installation Instructions




10. Pull back the wheel well liner. Unplug the electrical on the driver side of the vehicle (gray). Using a 10MM socket, remove the two (2) bolts in front of the tire (white). Do this on both sides of the vehicle.



 Disconnect washer tube on the driver side of the vehicle. Remove fascia and set aside to be reinstalled later.




12. On the back side of the fascia, remove the two (2) white clips and pull out center piece from fascia.

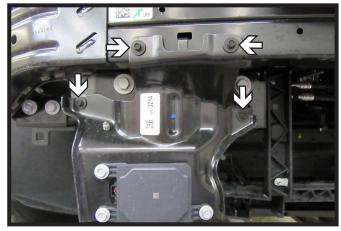

13. **Models with ACC:** Using a 7MM socket, remove the four (4) bolts from the Adaptive Cruise Control (ACC) bracket on the passenger side of the vehicle. Let bracket hang to be reinstalled later.

## 2021-2022 Cadillac Escalade (No Diesel)

(Includes Adaptive Cruise Control, Shutters, Night Vision, & Super Cruise)
Installation Instructions

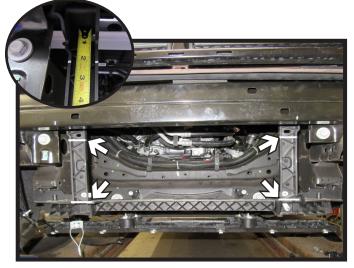

14. Using a saw, cut the two (2) vertical supports of the mounting bracket for the belly pan approximately 2" from the top (inset) and flush with the top of the lower cross member. Remove the cutout pieces.






15. Using a 10MM socket, remove the two (2) bolts from the underside of the mounting bracket. Remove bracket and set aside to be reinstalled later.





16. Slide the baseplate onto the vehicle and install three (3) 1/2" bolt with lock nut and whiz nut, two (2) bolts on the driver side and one (1) on the passenger side.

\*\* Use Loctite® Red on all bolt threads and tighten all bolts to the appropriate torque. \*\*

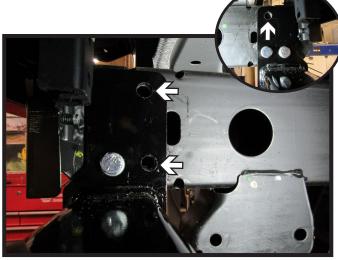

17. Using a 1/2" drill bit, drill the two (2) holes on the passenger side using the baseplate as a template.

**Note:** May need to ream out the top hole on the driver side (inset).


## 2021-2022 Cadillac Escalade (No Diesel)

(Includes Adaptive Cruise Control, Shutters, Night Vision, & Super Cruise)
Installation Instructions





18. Install the remaining three (3) 1/2" bolts with lock washers and whiz nuts into the side holes of the baseplate.

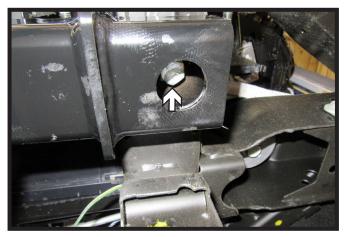

19. Using a 1/2" drill bit, drill the bottom hole on each side of the baseplate. Then install two (2) 1/2" bolts with lock nuts and whiz nuts, one (1) on each side.

\*\* Use Loctite® Red on all bolt threads and tighten all bolts to the appropriate torque. \*\*



20. Reinstall the ACC bracket on the passenger side of the vehicle.



21. Attach the permanent baseplate safety cables to the provided convenience link on the baseplate. The photo above shows the recommended installation of the cables to frame of vehicle. Additional options may interfere with suggested mounting; in this case, secure the cables to a solid piece of the frame as described in the General Information sheet. Be sure the safety cables do not rub against any hoses or moving parts. Do this on **BOTH** sides of the vehicle.

## 2021-2022 Cadillac Escalade (No Diesel)

(Includes Adaptive Cruise Control, Shutters, Night Vision, & Super Cruise)
Installation Instructions



22. Reinstall the belly pan mounting bracket.



23. Hold the fascia as close to its original position, mark and trim the fascia around the convenience links and attachment tabs. Reinstall the fascia, fascia cover and reconnect all electrical connections.

#### CUSTOMER SERVICE COMMITMENT

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our technical service team.

Additionally, please visit our website to see which rallies our team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.

© 2022 Blue Ox One Mill Road, Industrial Park Pender, Nebraska 68047 Phone: (402) 385-3051 Fax: (402) 385-3360 www.blueox.com

# **General Information**

- 1. Ensure that your product(s) are registered online at www.blueox.com. It is crucial to register your product(s) so that you may be alerted of product offerings, updates, upgrades, maintenance and safety bulletins, and/ or recalls.
- 2. It is the owner's responsibility to inspect all towing equipment for cracked welds, missing or worn parts and loose bolts before each towing trip. Be sure to use Loctite® Red on all bolts and tighten to the recommended specifications.
- 3. It is the owner's responsibility to hook up all towing equipment per manufacturer's instructions/recommendations.
- 4. Remove the attachment tabs when not in use (if applicable).

# **Notice To Baseplate Installer**

- 1. It is YOUR responsibility to watch for:
  - Oil cooler and air conditioner lines
  - Electrical wires and hoses
  - Missing parts or attaching points on the frame
  - \*\* If the baseplate is improperly installed and is against a wire or hose, it could cause fluid leaks or electrical shorts some time after the actual baseplate installation.


#### **Permanent Baseplate Safety Cable Installation**

Permanent baseplate safety cables are strongly recommended when towing a vehicle with a tow bar. The principle function of the permanent baseplate safety cables is to prevent the towed vehicle from breaking loose in the event the connection between the frame of the towed vehicle and the baseplate fails or becomes disconnected. The cables must be connected from the baseplate to the frame rail or cross member of the vehicle's frame. The illustrations below show the possible arrangements recommended by Blue Ox®. Each permanent baseplate safety cable must have an adequate weight rating for the towing system. The weight rating of the two (2) cables together will not qualify.

Do not mount the permanent baseplate safety cables against wires, hoses or brake lines.


These permanent baseplate safety cables should remain installed as long as the baseplate is installed on the vehicle. Permanent baseplate safety cables are to be used in conjunction with, and NOT a replacement for legally required safety cables attaching the towed vehicle to the towing vehicle.



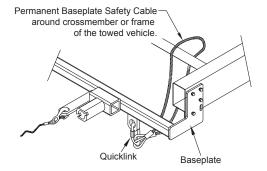

# Option #2

(Baseplates with out Convenience Link Tabs)

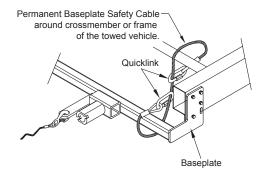

# BLUE OX ORIGINAL PURCHASERS THREE YEAR LIMITED WARRANTY

Automatic Equipment Manufacturing Company ("Automatic") warrants to the original (first) retail purchaser that this product, manufactured by Automatic, shall be free from defect in material and workmanship under normal use and service for a period of three years from the date of delivery.

During said three-year period, Automatic will repair or replace any parts that have been returned by the original purchaser, to the factory, transportation prepaid, and in Automatic's sole and absolute opinion found to be defective.

Limitations on Warranty Coverage:

Coverage under this warranty will be valid only if the customer warranty card is returned by the original purchaser within 30 days of purchase.

Coverage under this warranty will be effective only when a copy of the original invoice, showing date and place of purchase, accompanies any claim for warranty. This warranty is NON TRANSFERABLE.

This limited warranty will not cover, in any way or form, any alleged damages caused by incorrect or improper installation, improper use, modification or neglect of product, failure to properly service and maintain, misuse, act of God, accident or failure of the user to follow guidelines contained in the instructional material provided by Automatic.

This warranty does not cover normal wear and tear, paint or rust.

Warrantor assumes no responsibility to the owner for loss of use of product, loss of time, inconvenience or any other damage consequential or otherwise. Including, but not limited to mileage, expense of transporting of product, return shipping expense, mechanics travel time, telephone, road service, towing, and rental during repairs, travel, lodging, loss or damage to personal property or loss of earnings.

REPAIR OR REPLACEMENT AS SET FORTH IN THIS LIMITED WARRANTY IS THE SOLE EXCLUSIVE REMEDY OF THE PURCHASER. AUTOMATIC SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN LENGTH TO THE DURATION OF THIS WARRANTY.

Please visit <a href="http://blueox.com/warranty/">http://blueox.com/warranty/</a> to register your warranty

